

F45

Adapter AS	50
Adapter D	50
Adapter T / U / B / C	51
Arca	50
Bailey MK 1	54
Bailey MK 2	54
Bürstner	50
Challenger Chausson	50
Combi Rail Bracket (Rail Brandrup - Vamoose)	56
Dethleffs Globebus	52
Eriba Touring	54
Eura Mobil Karmann	52
Fiat Ducato - Renault Master	55
Fiat Ducato H2 - Citroën Jumper H2 - Peugeot Boxer H2 (≥ 1994 ≤ 2006)	55
Fiat Ducato H2 - Citroën Jumper H2 - Peugeot Boxer H2 (≥ 2006)	55
Fiat Ducato H2 Lift Roof - Hymercar / Pössl Lift Roof	55
Fiat Ducato H2 Roof Rail - Alu-Line Style	55
Fiat Ducato with Roof Rack	55
Fiberglass Roof	54
Fleurette	50
Ford Custom Lift Roof	58
Ford Custom Nugget High Roof	59
Ford Custom Nugget Lift Roof	59
Ford Transit	54
Ford Transit L3 H3	54
High Roof Adapter Westfalia	59
Hymer / Van B2	51
Hymer ≥ 2016	53
Hymer S	52
Hymer S-E Klasse	52
Hymercamp	53
Kit AS	50
Kit Auto	59
Kit Caravan	54
Kit Multi	54
Kit Roof Adapter	50
Kit Roof Rail	59
Kit S	50
Kit Van	55
Kit Wall Adapter	51
Laika Ecovip - Bürstner - Hobby / Adapter Laika Ecovip	51
Laika Ecovip 07	51
Laika Rexosline - Ecovip 07 - Kreos 09	52
Laika X	51
Mercedes Sprinter H3 - Sprinter H3 Westfalia - VW Crafter H3	54
Mercedes Vito	59
Pilote Explorateur	52
Rail	50
Rapido Serie S6 > 2024	53
Rapido Serie 6	53
Rapido Serie 7-8	53

Rapido Serie 9	53
Rapido Serie 9dF - 9M - 10	53
Renault Master H2 - Opel Movano H2 - Nissan Interstar H2	55
Renault Trafic - Opel Vivaro - Nissan NV 300 - Fiat Talento	58
Renault Trafic - Opel Vivaro - Nissan Primastar	58
V Class Marco Polo	58
Voyageur	52
VW T3	58
VW T4 Brandrup	57
VW T4 - VW T4 Lift Roof	57
VW T5 / T6 Lift Roof	57
VW T5 / T6 Multivan Transporter	57
VW T5 / T6 Multirail Reimo	57
Wingamm Oasi	52

F43van

Combi Rail Bracket (Rail Brandrup - Vamoose)	56
Ford Custom Lift Roof	58
Ford Transit Nugget High Roof	59
Ford Custom Nugget Lift Roof	59
High Roof Adapter Westfalia	59
Kit Auto	59
Kit Roof Rail	59
Mercedes Vito	59
PSA	58
Renault Trafic - Opel Vivaro - Nissan Primastar	58
Renault Trafic - Opel Vivaro - Nissan NV300 - Fiat Talento	58
V Class Marco Polo	58
VW T3	58
VW T4 - Brandrup	57
VW T4 / Lift Roof	57
VW T5 / T6 California	57
VW T5 / T6 Multivan Transporter	57
VW T5 / T6 Lift Roof	57
VW T5 / T6 Multirail Reimo / Multivan with Rail	57

F40van

Adapter PSA	66
Ford Custom L1 / Ford Custom L2	67
Mercedes V Class	66
Nissan NV 350	67
NV 200	67
Renault Trafic L1 / Renault Trafic L2	66
VW T5 / T6 Rail	66
VW T5 / T6	66

All bracket codes in the following pages are suitable for the left guide unless otherwise indicated.
(*right guide - **right and left guide)

F65 / F80

Adapter Caravan Roof	62
Adria Caravan	62
Arca Mobilvetta K-Yacht	60
Autocruise	61
Bailey	62
Caravan Standard	62-63
Carthago Chic Rapido i80 - i90	60
Carthago Malibu	61
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L2/L3 (≥ 2006)	64
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L4 (≥ 2006 - Low profile)	64
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L4 (≥ 2006)	64
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 (≥ 1994 ≤ 2006 - Low profile)	65
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 (≥ 1994 ≤ 2006)	65
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H3	64
Fiat Ducato / Citroën Jumper / Peugeot Boxer - Low profile (L2/L3 - ≥ 2006)	64
Fiat Ducato H2 Skyroof	64
Ford Transit H3	63
Ford Transit Van H2 L2	64
Giottiline - Fendt	60
Hobby Caravan	63
Hobby Easy / Ontour / Adria Adora	62
Hobby Excellent	62
Hobby Premium	63
Hobby Premium & Ontour	63
Hymmer	61
Iveco Daily H2	65
Kit Caravan Roof	62
Kit Caravan Standard	62
Kit Fixing Bar	63
Kit Standard	60
Laika Kreos 2005	60
Laika Kreos 21	60
Laika Ecovip / Rexosline / Kreos >09 <21	60
Laika Rexosline / Kreos 09	60
LMC - TEC	61
LMC Adapter Caravan Roof	62
Mercedes Sprinter - Roof Rail	65
Mercedes Sprinter / VW Crafter High Roof	65
Rapido C55i C86i	61
Rapido C Line	61
Rapido Distinction	61
Renault Master H2	65
Renault Master H2 - ≥ 2010	65
Smart Clamp Ducato	64
Sprinter F65eagle	65
Standard F65eagle 400	60
VW Crafter - Roof Rail	66
VW Crafter H3	66

F35pro

Brandrup VW T4	68
Campêrêve Cap Road	67
Class V Marco Polo	69
Combi Rail Bracket (Rail Brandrup - Vamoose)	67
Eriba Touring	70
Ford Custom Lift Roof	70
Ford Custom Cap Coast / Capland / Caplife	70
Ford Custom Capland / Capfun	70
Kit Auto	70
Kit Standard	70
Mercedes Viano / Marco Polo / Vito / V Class	69
Mercedes Vito / Vito Marco Polo	69
Mercedes Vito Jules Verne	69
Nissan NV200	69
PSA	69
Rail	70
Renault Trafic / Opel Vivaro / Fiat Talento / Nissan Primastar	69
Renault Trafic / Opel Vivaro / Fiat Talento / / Rapido Mirande S	69
VW Caddy Maxi	67
VW Caddy Maxi Lift Roof	67
VW T3 / T3 Lift Roof	68
VW T4 Lift Roof	68
VW T5 / T6 California	68
VW T5 / T6 Multirail Reimo	68
VW T5 / T6 Multivan Transporter	68
VW T5 / T6 Multivan Transporter (Roof Rail)	68
VW T6 Kepler	68

Compass

Kit Auto	
Kit Roof Rail	
Renault Trafic	71
VW T5 / T6 Transporter / Multivan Compass	


CaravanStore

Hobby CaravanStore	71
--------------------	----

All bracket codes in the following pages are suitable for the left guide unless otherwise indicated.
(*right guide - **right and left guide)


F45

ADAPTER AS / KIT S / KIT AS

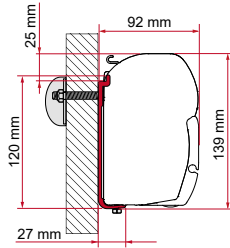


	Quantity / Length	Item No.
Adapter AS 300	1 x 300cm	98655-503
Adapter AS 350	1 x 350cm	98655-504
Adapter AS 400	1 x 400cm	98655-505
Adapter AS 450	1 x 450cm	98655-928
Kit S 120	1 x 12cm	98655-392
Kit S 400	1 x 40cm	98655-381
Kit AS 110 (Standard from 190 to 230cm)	2 x 12cm	98655Z007
Kit AS 120 (Standard from 260 to 400cm)	2 x 12cm - 1 x 8cm	98655-391
Kit AS 400 (Standard from 450 to 500cm)	2 x 40cm - 1 x 12cm	98655-390
Kit AS 400 L (Standard from 550cm)	4 x 40cm	98655-393

ADAPTER D

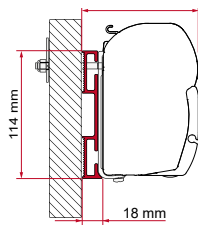


	Quantity / Length	Item No.
Adapter D	1 x 8cm	98655-021
	1 x 12cm	98655-022

KIT BÜRSTNER

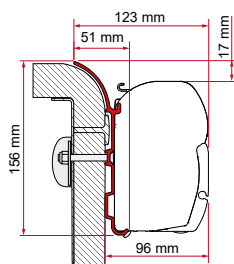

	Quantity / Length	Item No.
Kit Bürstner	2 x 12cm - 1 x 8cm	98655-749

RAIL

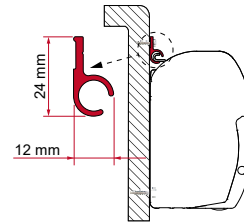


	Quantity / Length	Item No.
Rail	1 x 300cm	02361-01A
	1 x 400cm	02361-01C

KIT CHALLENGER CHAUSSON




Eden Allegro

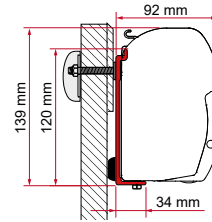


	Quantity / Length	Item No.
Kit Challenger Chausson	2 x 8cm - 1 x 40cm	98655-258

KIT ROOF ADAPTER

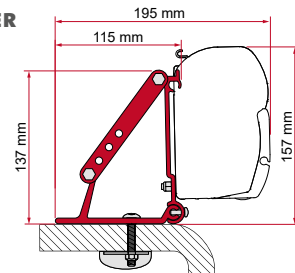


	Quantity / Length	Item No.
Kit Roof Adapter	3 x 8cm	98655-316

KIT FLEURETTE

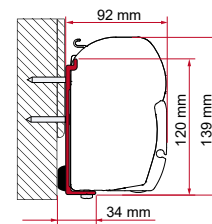

	Quantity / Length	Item No.
Kit Fleurette	1 x 8cm - 2 x 12cm	98655-082

ADAPTER ARCA

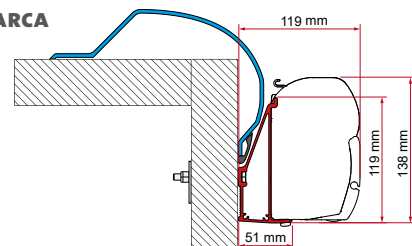




	Quantity / Length	Item No.
Adapter Arca	1 x 400cm	98655-852

● black finish brackets

* for right hand drive



** for left and right hand drive

ADAPTER T / U / B / C

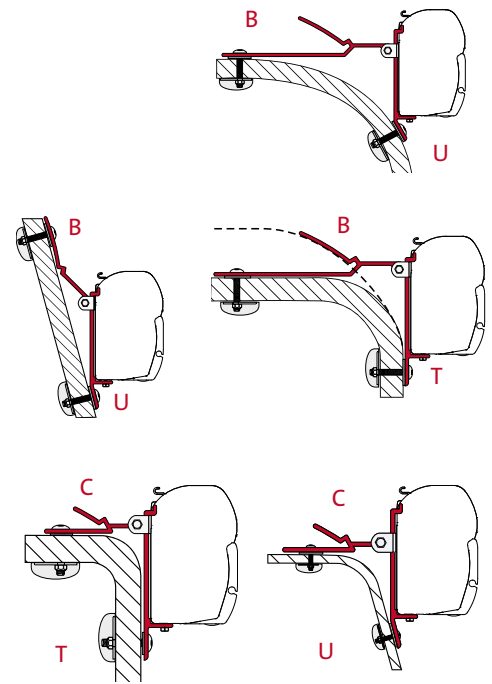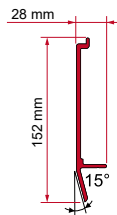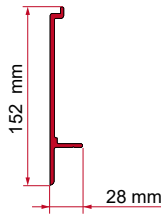

	Quantity	Item No.
Adapter T	1 pc	02437-01-

	Quantity	Item No.
Adapter U	1 pc	02437A01-

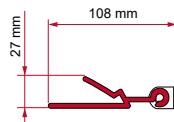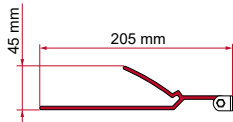


	Quantity	Item No.
Adapter B	1 pc	02096-01-

	Quantity	Item No.
Adapter C	1 pc	02097-01-

KIT / ADAPTER HYMER / VAN B2




*Hymermobile B
Classic B
Klasse
Starline

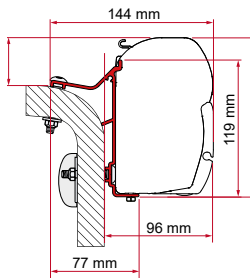


	Quantity / Length	Item No.
Kit Hymer / Van B2	2 x 8cm - 2 x 35cm	98655-243
	1 x 350cm	98655-244
Adapter Hymer / Van B2*	1 x 400cm	98655-245
	1 x 450cm	98655-246

KIT WALL ADAPTER

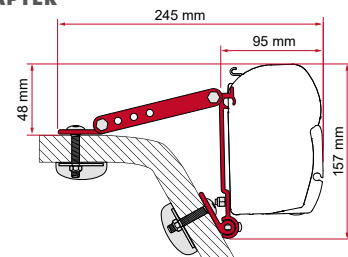


	Quantity / Length	Item No.
Kit Wall Adapter	3 x 8cm	98655-318

KIT LAIKA X

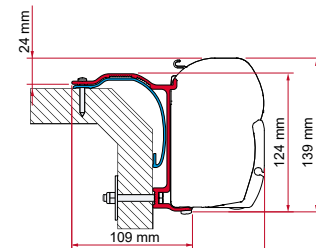

	Quantity / Length	Item No.
Kit Laika X	3 x 15cm	98655-761

KIT LAIKA ECOVIP - BÜRSTNER - HOBBY / ADAPTER LAIKA ECOVIP

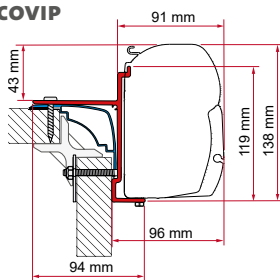


	Quantity / Length	Item No.
Kit Laika Ecovip - Bürstner - Hobby	3 x 15cm - 1 x 12cm	98655-357
Adapter Laika Ecovip	1 x 390cm	98655-469

KIT LAIKA ECOVIP 07




For awnings from 4m

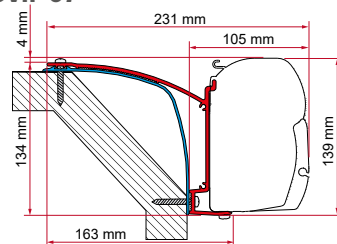

	Quantity / Length	Item No.
Kit Laika Ecovip 07	3 x 15cm	98655-467

● black finish brackets * for right hand drive ** for left and right hand drive


KIT LAIKA REXOSLINE - ECOVIP 07 - KREOS 09

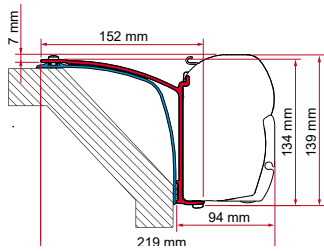

Quantity / Length Item No.

Kit Laika Rexosline - Ecovip 07 - Kreos 09	3 x 15cm	98655-418
--	----------	-----------


ADAPTER EURA MOBIL KARMANN

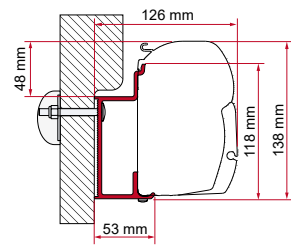

Quantity / Length Item No.

Adapter Eura Mobil Karmann	1 x 350cm	98655-764
	1 x 400cm	98655-765
	1 x 450cm	98655-766


KIT VOYAGEUR

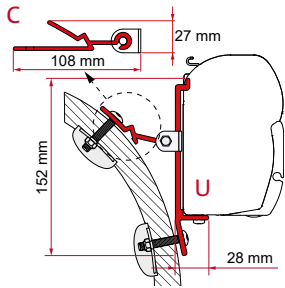

Quantity / Length Item No.

Kit Voyageur	3 x 8cm - 3 x 8cm	02097-01- (1 pc) + 02437A01- (1pc)
--------------	----------------------	---------------------------------------


KIT PILOTE EXPLORATEUR

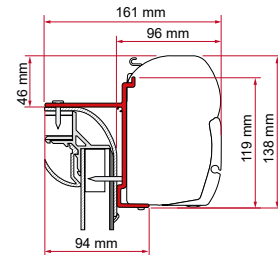

Quantity / Length Item No.

Kit Pilote Explorateur	3 x 15cm	98655-729
------------------------	----------	-----------

KIT DETHLEFFS GLOBEBUS

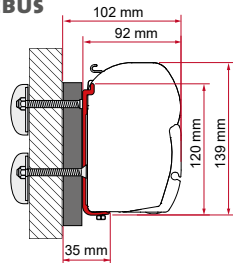


Quantity / Length Item No.

Kit Dethleffs Globebus	3 x 12cm	98655-730
------------------------	----------	-----------

ADAPTER HYMER S-E KLASSE




Hymermobile S
Klasse 650, 740, 820
Esterel ≥ 2007

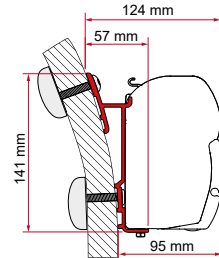

Quantity / Length Item No.

Adapter Hymer S-E Klasse	1 x 400cm	98655-249
	1 x 450cm	98655-250

KIT HYMER S

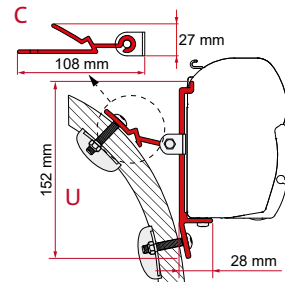


Quantity / Length Item No.

Kit Hymer S	3 x 8cm - 3 x 8cm	02097-01- (1pc) + 02437A01- (1pc)
-------------	----------------------	--------------------------------------

ADAPTER WINGAMM OASI



≥ 2006

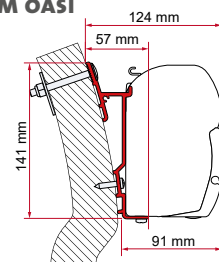


Quantity / Length Item No.

Adapter Wingamm Oasi	1 x 230cm	98655-929
	1 x 300cm	98655-930
	1 x 350cm	98655-931

KIT / ADAPTER HYMERCAMP




* Hymercamp Swing
Starline
Hobby Van
Caravan Hobby 09

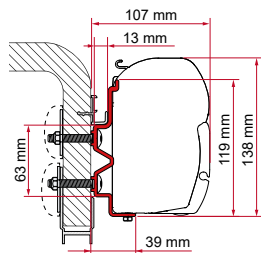

	Quantity / Length	Item No.
Kit Hymercamp	3 x 12cm	98655-278
	Quantity / Length	Item No.
	1 x 300cm	98655-277
	1 x 350cm	98655-276
Adapter Hymercamp*	1 x 400cm	98655-274
	1 x 450cm	98655-275
	1 x 500cm	98655-273

KIT / ADAPTER HYMER ≥ 2016

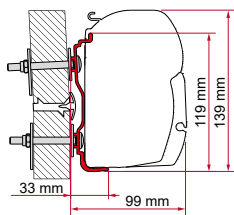


	Quantity / Length	Item No.
Kit Hymer ≥ 2016	3 x 12cm	986552059
	Quantity / Length	Item No.
	1 x 300cm	986552060
	1 x 350cm	986552061
Adapter Hymer ≥ 2016	1 x 400cm	986552062
	1 x 450cm	986552063
	1 x 500cm	986552064

ADAPTER RAPIDO SERIE 9dF - 9M - 10



≥ 2011

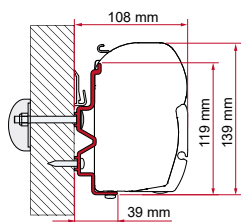


	Quantity / Length	Item No.
Adapter Rapido Serie 9dF - 9M - 10	1 x 350cm	98655-916
	1 x 400cm	98655-917
	1 x 450cm	98655-918

ADAPTER RAPIDO SERIE 7 - 8



Fiat 860F
Fiat Garage 860F,
870F, 890F

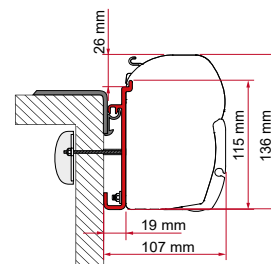


	Quantity / Length	Item No.
Kit Rapido Serie 7-8	2 x 8cm - 1 x 100cm	9865-222

ADAPTER RAPIDO SERIE S6 ≥ 2024




new
20
24

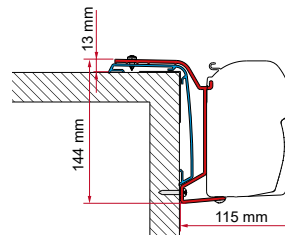


	Quantity / Length	Item No.
Adapter Rapido Serie S6 606F ≥ 2024	1 x 400 cm	98655Z173
Adapter Rapido Serie S6 686F ≥ 2024	1 x 450 cm	98655Z187
Adapter Rapido Serie S6 666F-696F ≥ 2024	1 x 500 cm	98655Z174

ADAPTER RAPIDO SERIE 6

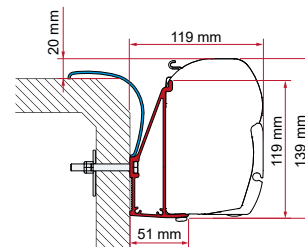

	Quantity / Length	Item No.
Adapter Rapido Serie 6	1 x 350cm	98655-895
	1 x 400cm	98655-896

KIT RAPIDO SERIE 9

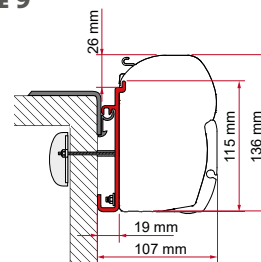


	Quantity / Length	Item No.
Kit Rapido Serie 9	2 x 8cm - 2 x 12cm	98655-223

● black finish brackets * for right hand drive ** for left and right hand drive

KIT ERIBA TOURING




≤ 06/2013

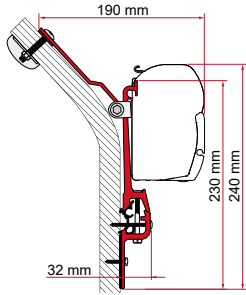

Quantity / Length Item No.

Kit Eriba Touring 3 x 8cm 98655-283

KIT CARAVAN

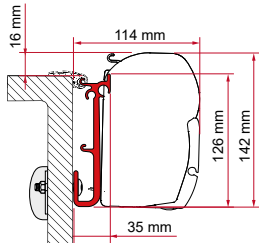


Quantity / Length Item No.

Kit Caravan 3 x 13cm 98655-252

KIT FORD TRANSIT



H2 ≤ 2014
H3 ≥ 2014

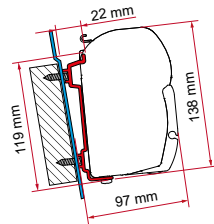

Quantity / Length Item No.


Kit Ford Transit 2 x 40cm 98655-741

KIT FORD TRANSIT H3



L3 / L4

new
20
24

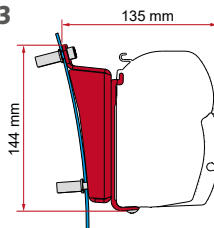


Quantity / Length Item No.

Kit Ford Transit H3 2 x 25 cm
1 x 8 cm 98655Z176
* 98655Z177

KIT MULTI



The only modular bracket fitted to compensate the curved roof of the vehicle. Renault Master 98, Fiat Ducato, Citroën Jumper, Peugeot Boxer

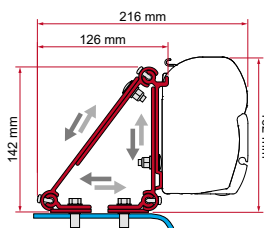


Quantity / Length Item No.

Kit Multi 1 x 8cm 98655-011

KIT BAILEY MK 2



≥ 2014

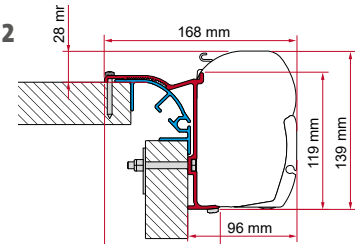


Quantity / Length Item No.

Kit Bailey MK 2 3 x 15cm 98655-946

KIT BAILEY MK 1




≥ 2011 ≤ 2013

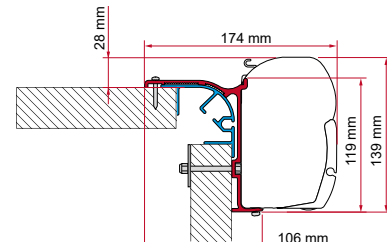

Quantity / Length Item No.

Kit Bailey MK 1 3 x 15cm 98655-879

KIT FIBERGLASS ROOF

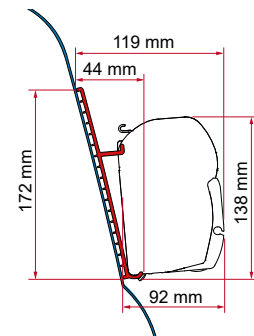

Quantity / Length Item No.

Kit Fiberglass Roof 2 x 40cm 98655-744


KIT MERCEDES SPRINTER H3 - SPRINTER H3 WESTFALIA - VW CRAFTER H3



H3

Mercedes / Dodge / Freightliner Sprinter ≥ 2006

VW Crafter I gen. ≥ 2006 ≤ 2016

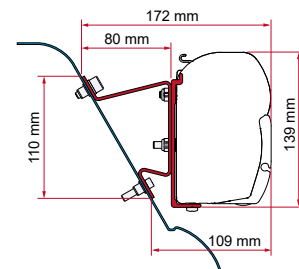

Quantity / Length Item No.

Kit Mercedes Sprinter H3 - Sprinter H3 Westfalia - VW Crafter H3 3 x 8cm 98655-591

● black finish brackets


* for right hand drive

** for left and right hand drive

KIT FIAT DUCATO H2 - CITROËN JUMPER H2 - PEUGEOT BOXER H2



≥ 1994 ≤ 2006
H2 - L2/L3

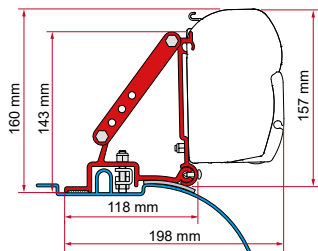

Quantity / Length

Item No.

Kit Fiat Ducato H2
Citroën Jumper H2
Peugeot Boxer H2


2 x 8cm

98655-680

KIT FIAT DUCATO H2 - CITROËN JUMPER H2 - PEUGEOT BOXER H2



≥ 2006
H2 - L2/L3
H2 - L4 (2x)

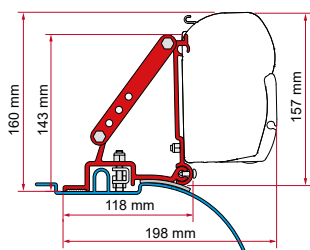

Quantity / Length

Item No.

Kit Fiat Ducato H2
Citroën Jumper H2
Peugeot Boxer H2

2 x 8cm


98655-755

KIT FIAT DUCATO WITH ROOF RACK



≥ 2006
H2 - L2/L3

Citroën Jumper
Peugeot Boxer
≥ 2006

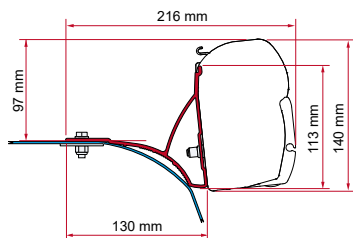

Quantity / Length

Item No.

Kit Fiat Ducato
with Roof Rack


3 x 12cm

98655-485

• KIT FIAT DUCATO H2 LIFT ROOF HYMERCAR / PÖSSL LIFT ROOF



≥ 2006
H2 - L2/L3/L4

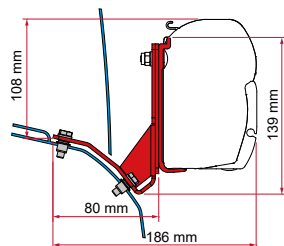

Quantity / Length

Item No.

Kit Fiat Ducato H2 Lift
Roof- Hymercara
Pössl Lift Roof

3 x 12cm

98655Z028


KIT FIAT DUCATO - RENAULT MASTER



H1/H2

Iveco 35C13 City
(Fiat New Daily)
Renault Master ≥ 03/1998

Fiat Ducato
Peugeot J5
Citroën C25
≥ 1981 ≤ 1994

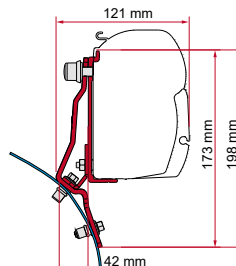

Quantity / Length

Item No.

Kit Fiat Ducato
Renault Master

2 x 14cm

98655-286


KIT RENAULT MASTER H2 - OPEL MOVANO H2 - NISSAN INTERSTAR H2



H2 - L2/L3

Renault Master
≥ 1997 ≤ 2009

Opel Movano
≥ 1998 ≤ 2010
Nissan Interstar
≥ 1998 ≤ 2011

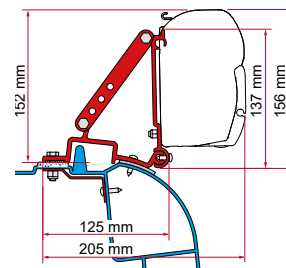

Quantity / Length

Item No.

Kit Renault Master H2 -
Opel Movano H2 -
Nissan Interstar H2

3 x 8cm


98655-681

KIT FIAT DUCATO H2 ROOF RAIL - ALU-LINE STYLE



≥ 2006
H2 - L2/L3

Citroën Jumper
Peugeot Boxer
≥ 2006

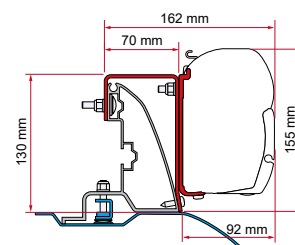

Quantity / Length

Item No.

Kit Fiat Ducato H2 Roof
Rail Alu-line Style

3 x 12cm


98655-625

KIT VAN



For awnings
up to 3.50m
long

Both A and B
brackets
are delivered
as standard
with the kit.
H1-H2
Peugeot J5
Citroën C25
Fiat Ducato ≤ 1994

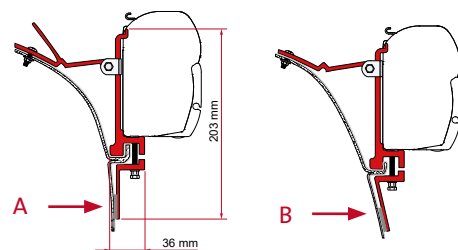

Ford Transit ≤ 2014 - H2
Mercedes Sprinter 208 D KB

Quantity / Length

Item No.

Kit Van

2 x 8cm

98655-017


● black finish brackets * for right hand drive ** for left and right hand drive




F45s for campervans / F43van

The F45s 260 and 300 awnings and the F43van awning will be equipped with the corresponding standard brackets (in yellow) as standard. The vehicle-specific brackets (in red) will no longer include the standard bracket (standard in the awning).

Dedicated bracket Kit Ford Custom Lift Roof

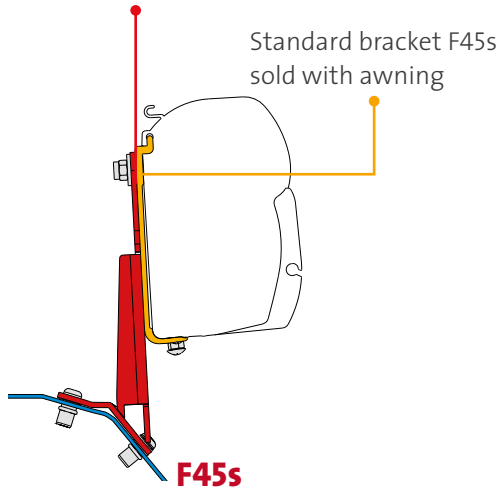

Dedicated bracket Kit Ford Custom Lift Roof

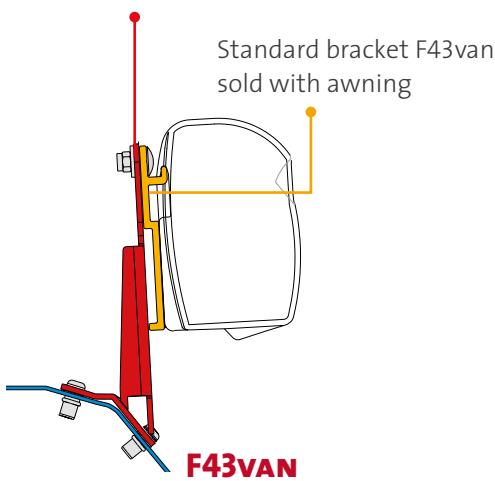

	F45	F43	Item Alu	Item Deep Black
Kit Combi Rail Bracket (Rail Brandrup - Vamoose)	●	●	-	98655Z147
Kit VW T5 / T6 California		●	-	98655A712
Kit VW T5 / T6 Multivan Transporter	●		98655-647	98655H647
Kit VW T5 / T6 Multivan Transporter		●	-	98655A647
Kit VW T5 / T6 Multivan Transporter RHD	●		98655-648	98655H648
Kit VW T5 / T6 Multivan Transporter RHD		●	-	98655A648
Kit VW T5/T6 Multivan with Rail		●	-	98655A686
Kit VW T5/T6 Multivan with Rail - RHD		●	-	98655A739
Kit VW T5/T6 Lift Roof	●		-	98655Z159
Kit VW T5/T6 Lift Roof		●	-	98655A159
Kit VW T5/T6 Lift Roof - RHD	●		-	98655Z160
Kit VW T5/T6 Lift Roof - RHD		●	-	98655A160
Kit VW T5 / T6 Multirail Reimo	●	●	-	98655Z156
Kit Brandrup VW T4	●	●	98655Z011	-
Kit VW T4 / Lift Roof	●	●	-	98655-292
Kit VW T3	●	●	-	98655-035
Kit PSA		●	-	98655A090
Kit Ford Custom Lift Roof	●	●	-	98655Z169
Kit Ford Custom Lift Roof - RHD	●	●	-	98655Z170
Kit V Class Marco Polo	●	●	-	98655Z022
Kit Renault Trafic - Opel Vivaro - Nissan Primastar	●		98655-854	-
Kit Renault Trafic - Opel Vivaro - Nissan Primastar		●	-	98655A854
Kit Renault Trafic - Opel Vivaro - Nissan NV300 - Fiat Talento	●		98655Z021	-
Kit Renault Trafic - Opel Vivaro - Nissan NV300 - Fiat Talento		●	-	98655A021
Kit Ford Transit Nugget High Roof	●	●	98655Z023	-
Kit Ford Custom Nugget Lift Roof	●	●	-	98655Z114
Kit Auto	●	●	98655-310	-
Kit Roof Rail	●	●	-	98655-770
Kit High Roof Adapter Westfalia	●	●	98655-317	-
Kit Mercedes Vito	●	●	-	98655-284


• **KIT COMBI RAIL BRACKET**



≥ 2003
H1 - L1

VW T5 / T6
Transporter /
Caravelle /
Multivan

Also for models
with lift roof

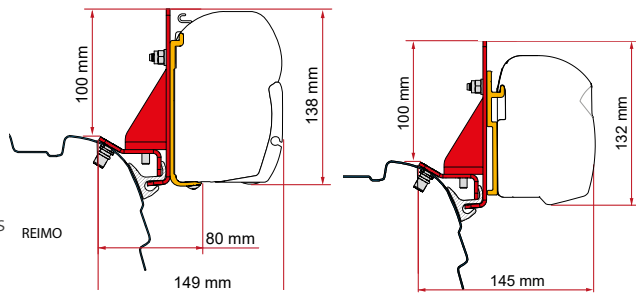

Quantity / Length

Item No.


Kit Combi Rail Bracket (Rail Brandrup - Vamoose) 2 x 8cm ** 98655Z147

● black finish brackets

* for right hand drive

** for left and right hand drive

KIT VW T5 / T6 MULTIVAN TRANSPORTER

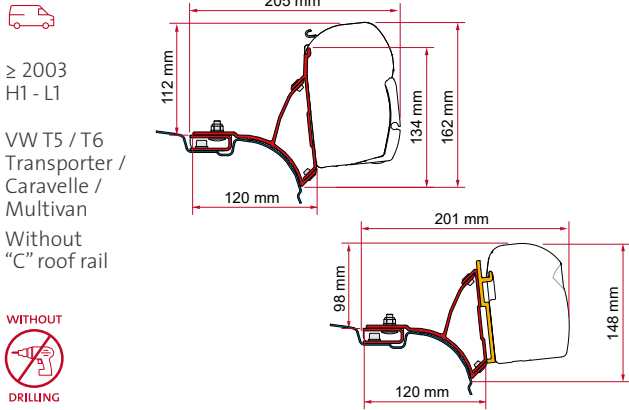


≥ 2003
H1 - L1
VW T5 / T6
Transporter /
Caravelle /
Multivan
Without
"C" roof rail



F45s	Quantity / Length	Item No.
Kit VW T5 / T6 Multivan Transporter	2 x 21,5 cm	● 98655H647 * 98655-648 ** 98655H648
F43van	Quantity / Length	Item No.
Kit VW T5 / T6 Multivan Transporter	2 x 21,5 cm	● 98655A647 * 98655A648


• KIT VW T5 / T6 MULTIRAIL REIMO

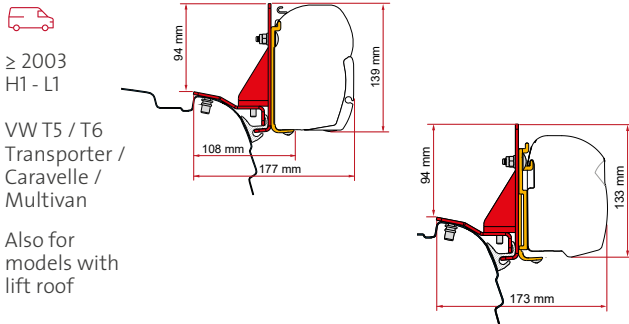

≥ 2003
H1 - L1
VW T5 / T6
Transporter /
Caravelle /
Multivan
Also for
models with
lift roof

Quantity / Length	Item No.
Kit VW T5 / T6 Multirail Reimo	2 x 8cm ** 98655Z156

KIT VW T4 - VW T4 LIFT ROOF

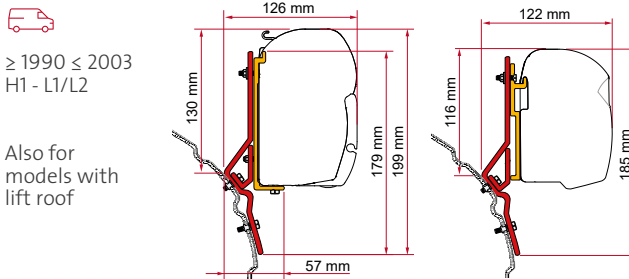


≥ 1990 ≤ 2003
H1 - L1/L2
Also for
models with
lift roof

Quantity / Length	Item No.
Kit VW T4 - VW T4 Lift Roof	2 x 14cm 98655-292

● black finish brackets * for right hand drive ** for left and right hand drive


• KIT VW T5 / T6 LIFT ROOF

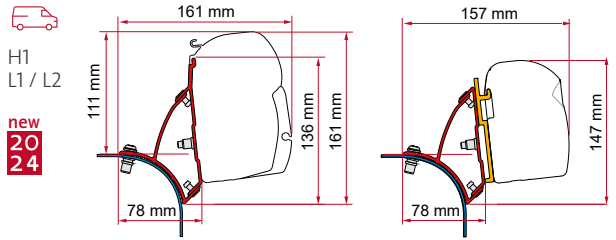

H1
L1 / L2
new
20
24

F45s	Quantity / Length	Item No.
Kit VW T5/T6 Lift Roof	2 x 21,5 cm	98655Z159 * 98655Z160
F43van	Quantity / Length	Item No.
Kit VW T5/T6 Lift Roof	2 x 21,5 cm	98655A159 * 98655A160


• KIT VW T5 / T6 CALIFORNIA

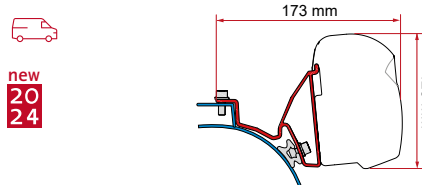

new
20
24

F43van	Quantity / Length	Item No.
Kit VW T5/T6 California	2 x 12 cm	98655A712


• KIT VW T5 / T6 MULTIVAN WITH RAIL

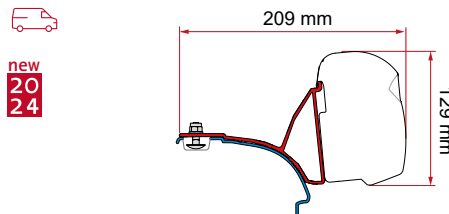

new
20
24

F43van	Quantity / Length	Item No.
Kit VW T5/T6 Multivan with Rail	1 x 12 cm 1 x 21,5 cm	98655A686 * 98655A739

KIT VW T4 BRANDRUP

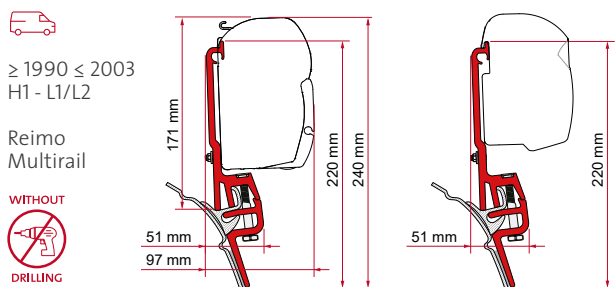

≥ 1990 ≤ 2003
H1 - L1/L2
Reimo
Multirail




Quantity / Length	Item No.
Kit Brandrup VW T4	2 x 8cm 98655Z011

• **KIT VW T3**



≥ 1979 ≤ 1990
H1

Also for models with lift roof

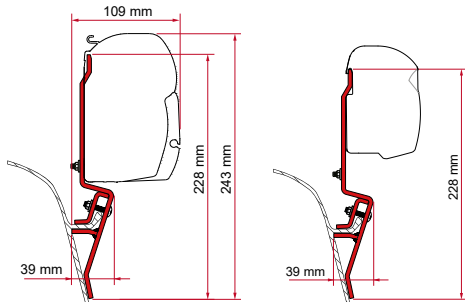


Quantity / Length Item No.

Kit VW T3	2 x 8cm	98655-035
-----------	---------	-----------

• **KIT PSA**



new
20
24

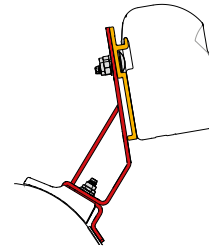

F43van Quantity / Length Item No.

Kit PSA	2 x 20 cm	98655A090
---------	-----------	-----------


• **KIT FORD CUSTOM LIFT ROOF**



H1
L1 / L2

new
20
24

Attention: opening/closing operations of the awning must be performed with the sliding door closed.

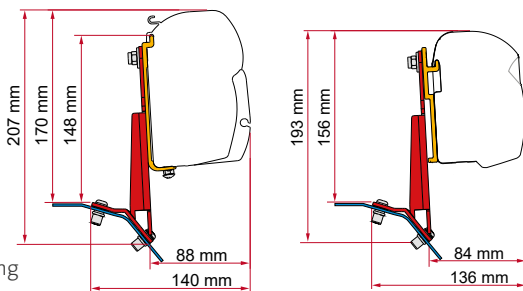


Quantity / Length Item No.

Kit Ford Custom Lift Roof	2 x 12cm	98655Z169 * 98655Z170
---------------------------	----------	--------------------------

• **KIT V CLASS MARCO POLO**



≥ 2014
H1 - L2
Not suitable for Marco Polo with electric roof

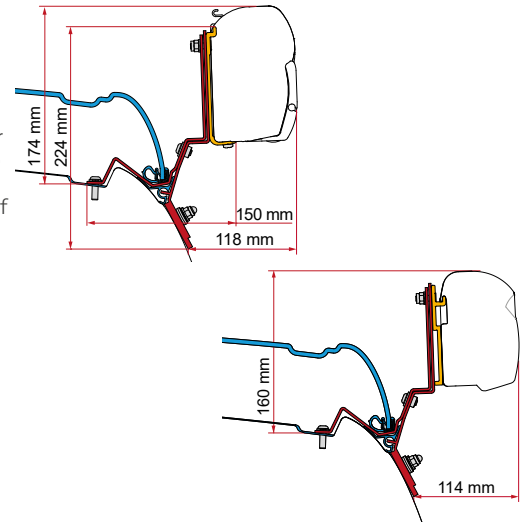


Quantity / Length Item No.

Kit V Class Marco Polo	1 x 12cm - 1 x 13cm	98655Z022
------------------------	------------------------	-----------

• **KIT RENAULT TRAFIC - OPEL VIVARO - NISSAN PRIMASTAR**



≥ 2001 ≤ 2014
H1 - L1/L2

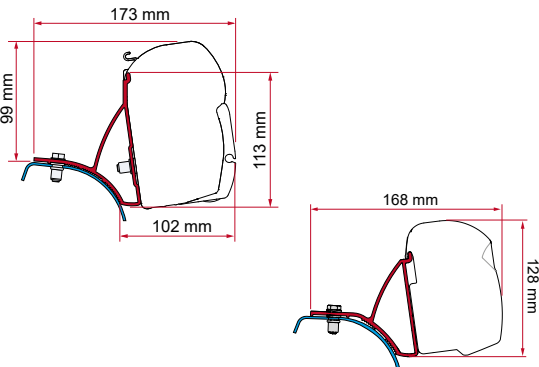

F45s Quantity / Length Item No.

Kit Renault Trafic - Opel Vivaro - Nissan Primastar	2 x 16 cm	98655-854
---	-----------	-----------

F43van Quantity / Length Item No.


Kit Renault Trafic - Opel Vivaro - Nissan Primastar	2 x 16 cm	98655A854
---	-----------	-----------

• **KIT RENAULT TRAFIC - OPEL VIVARO - NISSAN NV300 - FIAT TALENTO**



≥ 2014
H1 - L1/L2

Opel Vivaro B
Vauxhall Vivaro B
≥ 2014 ≤ 2018

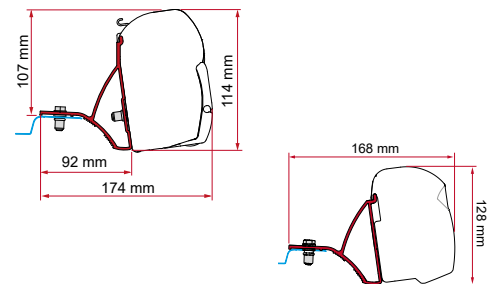

F45s Quantity / Length Item No.

Kit Renault Trafic - Opel Vivaro - Nissan NV300 - Fiat Talento	2 x 16 cm	98655Z021
--	-----------	-----------

F43van Quantity / Length Item No.


Kit Renault Trafic - Opel Vivaro - Nissan NV300 - Fiat Talento	2 x 16 cm	98655A021
--	-----------	-----------

• black finish brackets

* for right hand drive

** for left and right hand drive


KIT FORD CUSTOM NUGGET HIGH ROOF

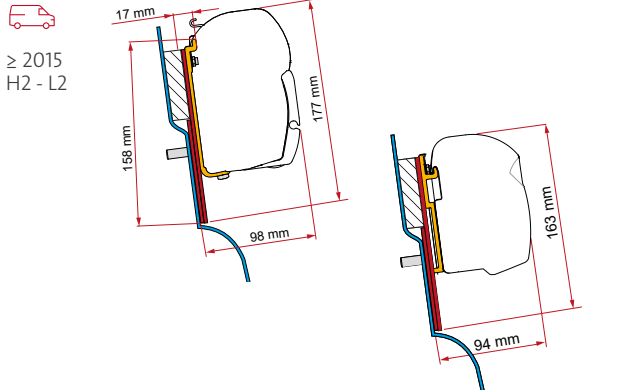

≥ 2015
H2 - L2

	Quantity / Length	Item No.
Kit Ford Custom Nugget - High Roof	2 x 12cm	98655Z023


• KIT FORD CUSTOM NUGGET LIFT ROOF

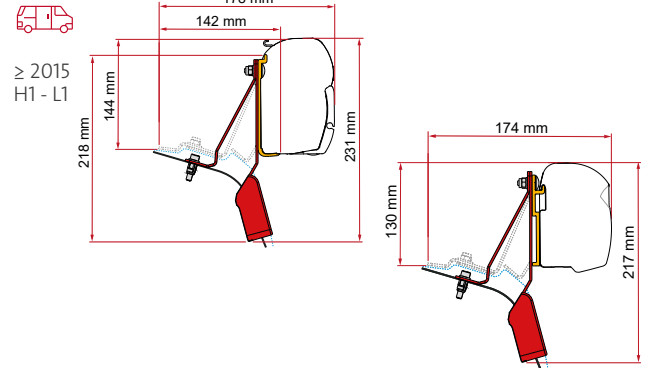

≥ 2015
H1 - L1


	Quantity / Length	Item No.
Kit Ford Custom Nugget Lift Roof	2 x 8cm	98655Z114

KIT AUTO

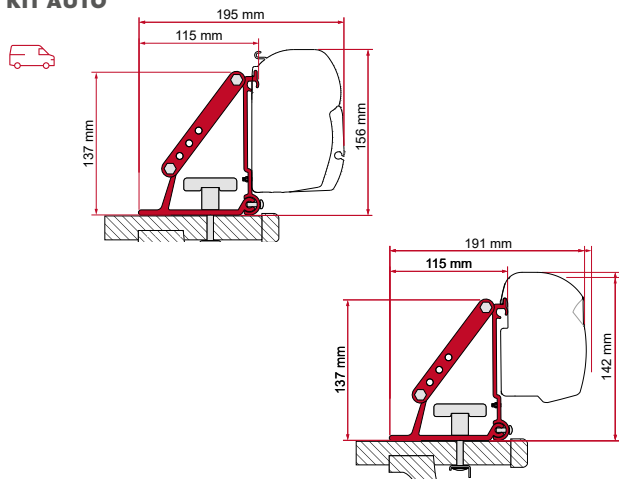

	Quantity / Length	Item No.
Kit Auto	2 x 8cm	98655-310

KIT ROOF RAIL

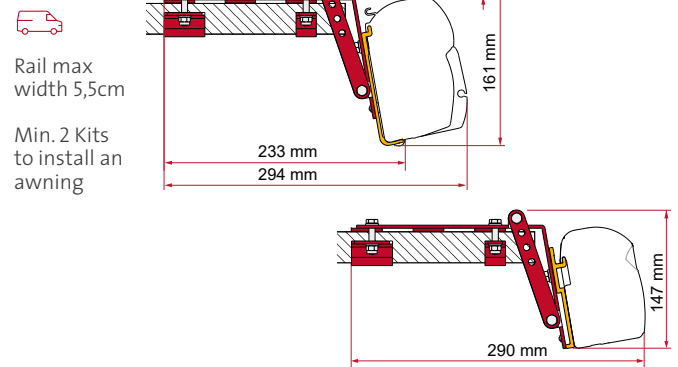


Rail max width 5,5cm

Min. 2 Kits to install an awning


	Quantity / Length	Item No.
Kit Roof Rail	1 x 12cm	98655-770

KIT HIGH ROOF ADAPTER WESTFALIA

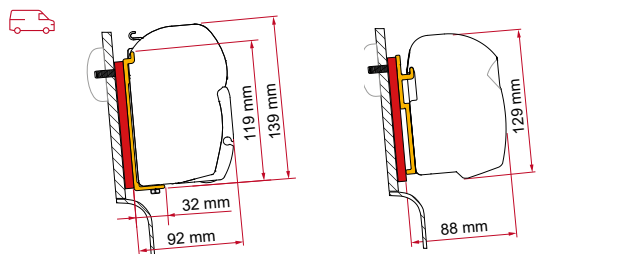

	Quantity / Length	Item No.
Kit High Roof Adapter Westfalia	2 x 12cm	98655-317

KIT MERCEDES VITO

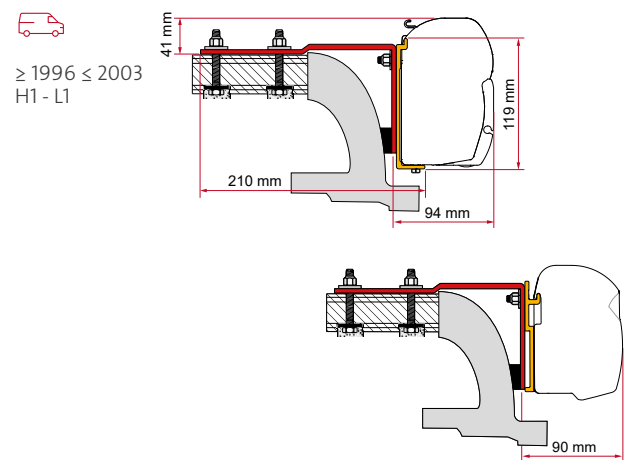


≥ 1996 ≤ 2003
H1 - L1

	Quantity / Length	Item No.
Kit Mercedes Vito	2 x 14cm	98655-284

● black finish brackets * for right hand drive ** for left and right hand drive

F80 / F65

KIT STANDARD

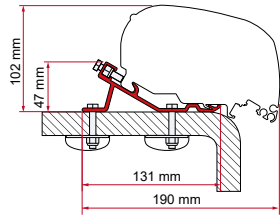


Quantity / Length Item No.

Kit Standard 3 x 20cm 98655-855

KIT LAIKA KREOS 2005



≥ 2005

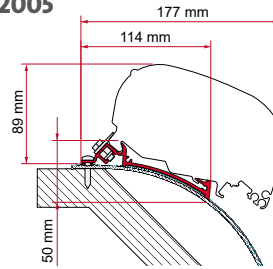


Quantity / Length Item No.

Kit Laika Kreos 05 3 x 15cm 98655-698

KIT GIOTLINE - FENDT



For Genetics / Graal

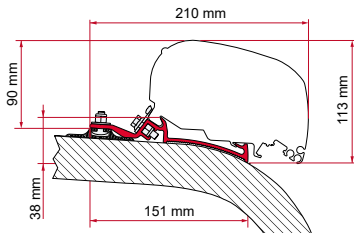


Quantity / Length Item No.

Kit Giottline - Fendt 3 x 15cm 98655-725

KIT LAIKA KREOS > 2021




≥ 2021

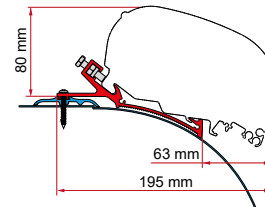

Quantity / Length Item No.

Kit Laika Kreos 21 4 x 15cm 98655Z119

KIT / ADAPTER LAIKA ECOVIP / REXOSLINE / KREOS

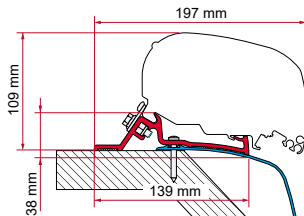

Quantity / Length Item No.

Adapter Laika Ecovip / Rexosline / Kreos >09 <21 **[New]** 1 x 500 cm 98655Z168

Kit Laika Rexosline / Kreos 09 4 x 15 cm 98655-419


KIT ARCA MOBILVETTA K-YACHT



Quantity / Length Item No.

Kit Arca Mobilvetta K-Yacht 3 x 15cm 98655Z079

ADAPTER STANDARD F65EAGLE 400

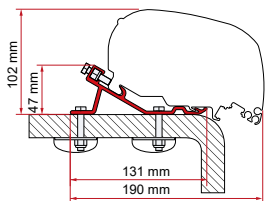


Quantity / Length Item No.

Adapter Standard F65eagle 400 1 x 400cm 98655-969

ADAPTER CARTHAGO CHIC RAPIDO i80 - i90



≤ 2014

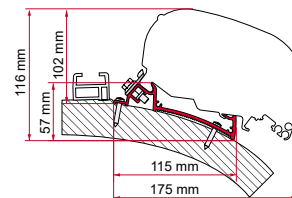

Quantity / Length Item No.

1 x 340cm 98655Z135

1 x 400cm 98655-736

Adapter Carthago Chic Rapido i80 - i90 1 x 450cm 98655-737

1 x 490cm 98655-738


1 x 550cm 98655Z130

● black finish brackets

* for right hand drive

** for left and right hand drive

ADAPTER RAPIDO DISTINCTION

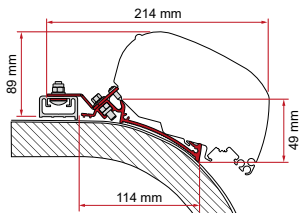


	Quantity / Length	Item No.
Adapter Rapido Distinction	1 x 400cm	98655Z080
	1 x 450cm	98655Z081
	1 x 490cm	98655Z082
	1 x 600cm	98655Z125

ADAPTER RAPIDO C LINE




Rapido C86, C56, C55, C50

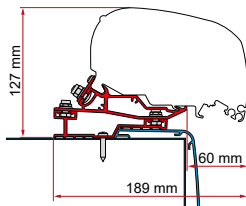


	Quantity / Length	Item No.
Adapter Rapido C Line	340cm - C56	98655Z120
	400cm - C50	98655Z121
	425cm - C55	98655Z122
	450cm - C86	98655Z123

ADAPTER RAPIDO C55i C86i

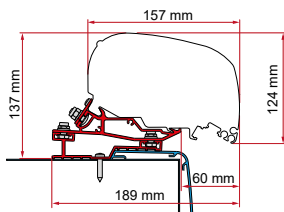


	Quantity / Length	Item No.
Adapter Rapido C55i C86i	1 x 500cm	98655Z138

KIT AUTOCRUISE

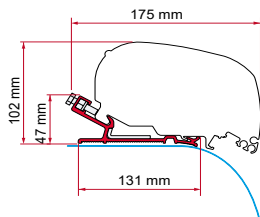


	Quantity / Length	Item No.
Kit Autocruise	3 x 15cm	98655-420

ADAPTER LMC - TEC

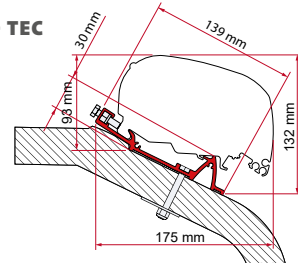


	Quantity / Length	Item No.
Adapter LMC - TEC	1 x 290cm	98655-773
	1 x 340cm	98655-774
	1 x 370cm	98655-775
	1 x 400cm	98655-776
	1 x 450cm	98655Z126
	1 x 500cm	98655Z127
	1 x 550cm	98655Z128
	1 x 600cm	98655Z129

ADAPTER CARTHAGO MALIBU

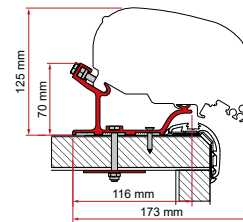


	Quantity / Length	Item No.
Adapter Carthago Malibu	1 x 340cm	98655Z083
	1 x 400cm	98655Z084
	1 x 450cm	98655Z085
	1 x 490cm	98655Z086

ADAPTER HYMER

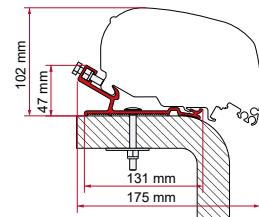

	Quantity / Length	Item No.
Adapter Hymer	1 x 290cm	98655-932
	1 x 320cm	98655-933
	1 x 340cm	98655-934
	1 x 370cm	98655-935
	1 x 400cm	98655-936
	1 x 450cm	98655-937
	1 x 490cm	98655-938
	1 x 550cm	98655Z132
	1 x 600cm	98655Z133

KIT CARAVAN STANDARD

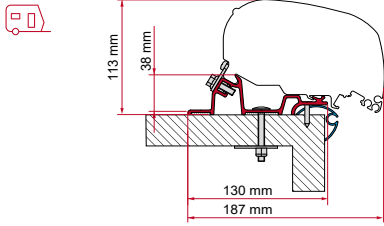


Quantity / Length Item No.

Kit Caravan Standard 2 x 50cm - 2 x 30cm 98655-657

KIT / ADAPTER CARAVAN ROOF



Dethleffs
Fendt
LMC
Trigano

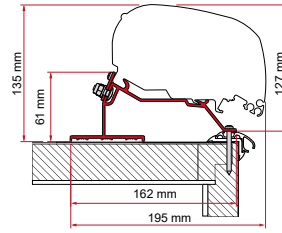

Kit and adapters equipped with aluminum finishing kit as standard


Quantity / Length Item No.

Adapter Caravan Roof	1 x 290cm	98655Z067
	1 x 320cm	98655Z068
	1 x 340cm	98655Z069
	1 x 370cm	98655Z070
	1 x 400cm	98655Z071
	1 x 425cm	98655Z072
	1 x 450cm	98655Z073
	1 x 500cm	98655Z074
	1 x 550cm	98655Z075
	1 x 600cm	98655Z076

Quantity / Length Item No.

Kit Caravan Roof 3 x 100cm 98655Z066

KIT LMC ADAPTER CARAVAN ROOF

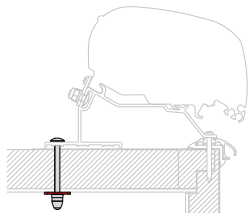


Kit consisting of 4 plates, screws & nuts enabling the installation of the F80s awning to LMC caravans using the Kit or Adapter Caravan Roof

Quantity Item No.

Kit LMC Adapter Caravan Roof 4 plates, screws & nuts 98655Z100

KIT BAILEY

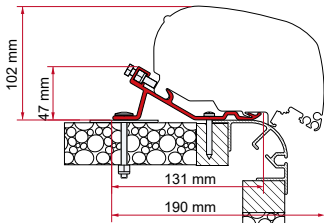


Quantity / Length Item No.

Kit Bailey 3 x 25cm 98655-939

ADAPTER / KIT ADRIA CARAVAN



≥ 2015

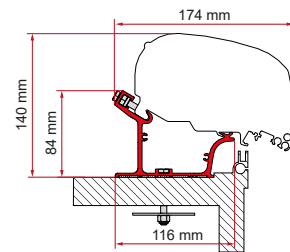


* without drilling

Quantity / Length Item No.

Kit Adria Caravan	2 x 50cm + 2 x 27cm	98655Z140
Adapter Adria Caravan 450 *	450cm	98655Z141
Adapter Adria Caravan 500 *	500cm	98655Z142
Adapter Adria Caravan 550 *	550cm	98655Z143
Adapter Adria Caravan 600 *	600cm	98655Z144


KIT HOBBY EASY / ONTOUR / ADRIA ADORA

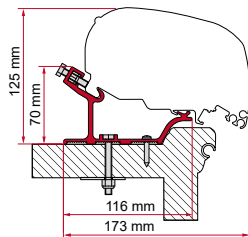

Quantity / Length Item No.

Kit Hobby Easy / Ontour / Adria Adora 2 x 50cm - 2 x 30cm 98655-949

KIT HOBBY EXCELLENT

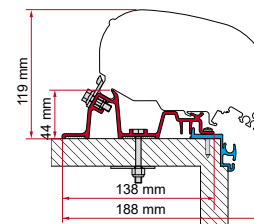

Quantity / Length Item No.


Kit Hobby Excellent 2 x 50cm - 2 x 30cm 98655-662

● black finish brackets

* for right hand drive

** for left and right hand drive


ADAPTER CARAVAN STANDARD

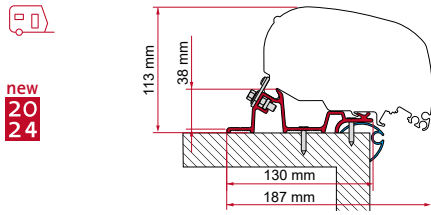

new
20
24

	Quantity / Length	Item No.
Adapter Caravan Standard 320	1 x 320cm	98655Z178
Adapter Caravan Standard 340	1 x 340cm	98655Z179
Adapter Caravan Standard 370	1 x 370cm	98655Z180
Adapter Caravan Standard 400	1 x 400cm	98655Z181
Adapter Caravan Standard 425	1 x 425cm	98655Z182
Adapter Caravan Standard 450	1 x 450cm	98655Z183
Adapter Caravan Standard 500	1 x 500cm	98655Z184
Adapter Caravan Standard 550	1 x 550cm	98655Z185
Adapter Caravan Standard 600	1 x 600cm	98655Z186


KIT HOBBY CARAVAN

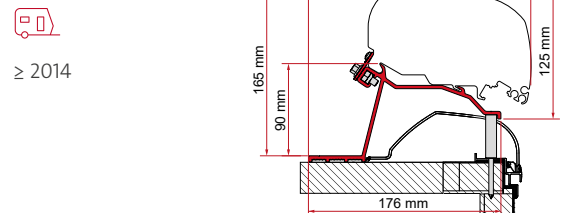

≥ 2014

	Quantity / Length	Item No.
Kit Hobby Caravan	2 x 27cm - 2 x 60cm	98655Z065


KIT FIXING BAR

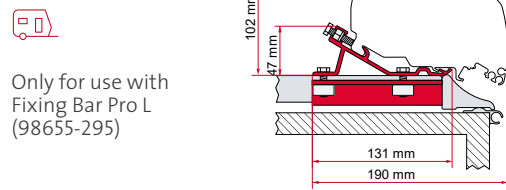

Only for use with Fixing Bar Pro L (98655-295)

	Quantity / Length	Item No.
Kit Fixing Bar	3 x 20cm	98655-384


KIT HOBBY PREMIUM & ONTOUR

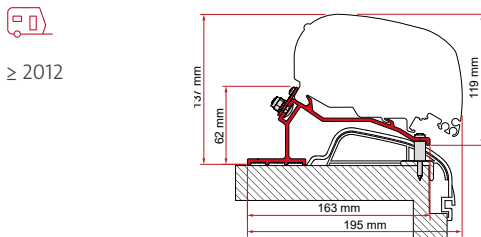

≥ 2012


	Quantity / Length	Item No.
Kit Hobby Premium & Ontour	2 x 25cm - 2 x 50cm	98655Z089

KIT HOBBY PREMIUM

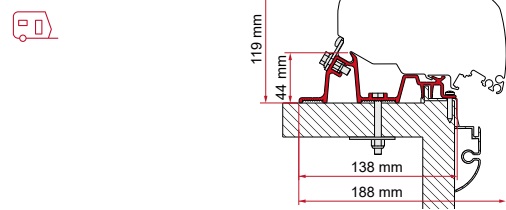

	Quantity / Length	Item No.
Kit Hobby Premium	2 x 50cm - 2 x 30cm	98655-628

KIT HOBBY CARAVAN

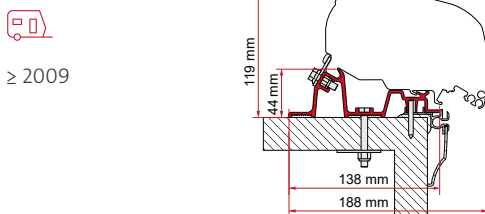

≥ 2009


	Quantity / Length	Item No.
Kit Hobby Caravan	2 x 50cm - 2 x 30cm	98655-921

ADAPTER FORD TRANSIT H3



≥ 2014 H3 - L4

MK8

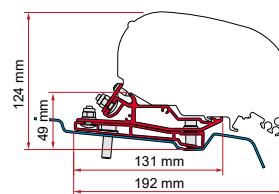


Check the position of the antenna on the vehicle before purchase and installation

	Quantity / Length	Item No.
Adapter Ford Transit L3 H3	1 x 320 cm	98655Z145
	1 x 320 cm	*98655Z163
Adapter Ford Transit L4 H3	1 x 400 cm	98655Z108
	1 x 400 cm	*98655Z164

● black finish brackets * for right hand drive ** for left and right hand drive

**** KIT DUCATO H2 SKYROOF**

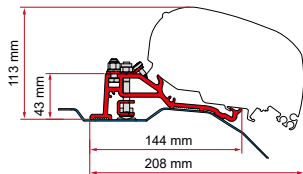

bracket required if the vehicle is equipped with a panoramic rooflight

Quantity / Length Item No.


Kit Ducato H2 Skyroof	3 x 35cm	98655Z139
-----------------------	----------	-----------

ADAPTER FORD TRANSIT VAN H2



H2

new 2024

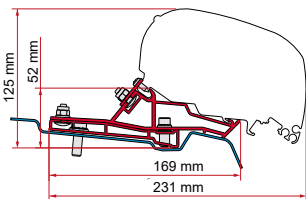

Quantity / Length Item No.


Adapter Ford Transit Van - H2 L2	1 x 290cm	98655Z166
----------------------------------	-----------	-----------

Adapter Ford Transit Van - H2 L3	1 x 340cm	98655Z167
----------------------------------	-----------	-----------

**** KIT SMART CLAMP DUCATO**



≥ 2006
H2 - L2 / L3 / L4
F80s

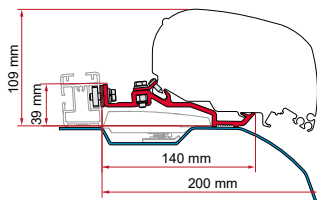


Quantity / Length Item No.

Kit Smart Clamp Ducato	2 x 20cm - 2 x 12cm	98655Z097
------------------------	------------------------	-----------

**** KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER**



≥ 2006
H2 - L2 / L3
Low profile
Only for F80s

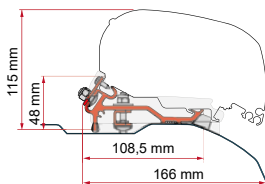

Brackets complete with Rain Guard Slim Kit 450cm and Cover Kit

Not suitable for vehicles with front panoramic rooflight

Quantity / Length Item No.


Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer Low Profile	1 x 20cm - 1 x 15cm - 1 x 12cm	98655Z149
--	--------------------------------------	-----------

● 98655Z150

**** KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006
H2 - L4
Low profile
Only for F80s

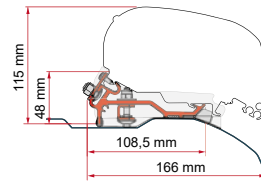

Brackets complete with Rain Guard Slim Kit 450cm and Cover Kit

Not suitable for vehicles with front panoramic rooflight


Quantity / Length Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer Low Profile	2 x 26cm - 1 x 12cm	98655Z148
--	------------------------	-----------

**** KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006
H2 - L2 / L3
For F80s and F65s

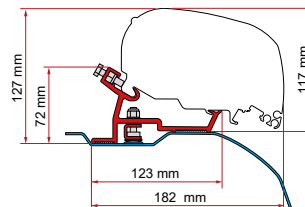

Before installation, check compatibility with the front panoramic rooflight

Brackets equipped with Kit Rain Guard 300cm

Quantity / Length Item No.


Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer	1 x 20cm - 1 x 15cm - 1 x 12cm	98655Z101
--	--------------------------------------	-----------

● 98655Z102

**** KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006
H2 - L4
For F80s and F65s

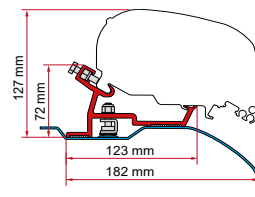

Before installation, check compatibility with the front panoramic rooflight

Brackets equipped with Kit Rain Guard 400cm


Quantity / Length Item No.

Kit Fiat Ducato / Jumper / Boxer - H2	2 x 26cm - 1 x 12cm	98655-904
---------------------------------------	------------------------	-----------

KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H3



≥ 2006
H3 - L3 / L4

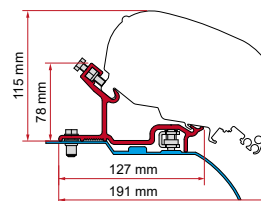

Quantity / Length Item No.


Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H3	1 x 20cm - 1 x 25cm - 1 x 35cm	98655-656
---	--------------------------------------	-----------


● black finish brackets

* for right hand drive

** for left and right hand drive

KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER H2 - ≤ 06


 ≥ 1994 ≤ 2006
H2 - L2 / L3
High profile bracket

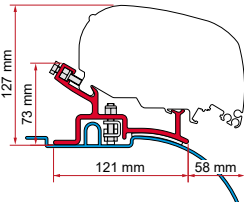


Quantity / Length Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - ≤ 2006	2 x 20cm	98655-373
--	----------	-----------

KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER H2 - ≤ 06

 ≥ 1994 ≤ 2006
H2 - L2 / L3
Low profile bracket

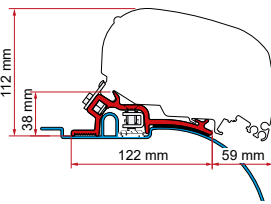


Quantity / Length Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - ≤ 2006	2 x 20cm	98655-693
--	----------	-----------

ADAPTER SPRINTER F65EAGLE


 Sprinter ≥ 2006
VW Crafter ≥ 2006 ≤ 2016

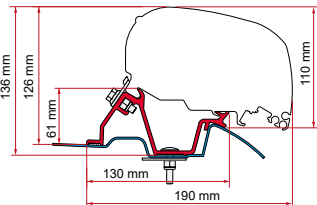


Quantity / Length Item No.

Adapter Sprinter F65eagle	1 x 400cm	98655-768 * 98655Z010
---------------------------	-----------	--------------------------

KIT RENAULT MASTER H2

 ≥ 1997 ≤ 2009
H2 - L2 / L3

Also for
Opel Movano ≥ 1998 ≤ 2010
Nissan Interstar ≥ 1998 ≤ 2011

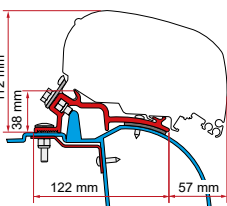


Quantity / Length Item No.

Kit Renault Master H2	2 x 29cm - 1 x 12cm	98655-468
-----------------------	---------------------	-----------

KIT MERCEDES SPRINTER - ROOF RAIL



with Roof Rail
≥ 2006 ≤ 2016
H2 - L1/L2/L3
Mercedes Sprinter/
VW Crafter/
Freightliner
Sprinter/Dodge Sprinter

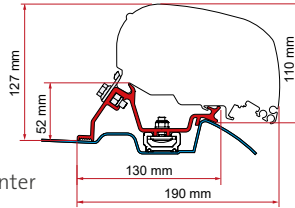

≥ 2016
H2 - L1/L2/
L3/L4
Mercedes
Sprinter/
Freightliner
Sprinter/
Dodge
Sprinter




Quantity / Length Item No.

Kit Mercedes Sprinter with Roof Rail	2 x 40cm - 1 x 12cm	98655-772
--------------------------------------	---------------------	-----------

KIT MERCEDES SPRINTER / VW CRAFTER HIGH ROOF



≥ 2006 ≤ 2016
H2 - L1/L2/L3/L4
Mercedes Sprinter/
VW Crafter/
Dodge Sprinter/
Freightliner Sprinter

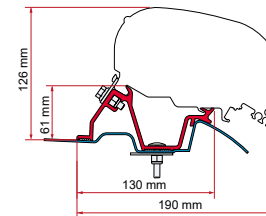

≥ 2016
H2 - L1/L2/
L3/L4
Mercedes
Sprinter/
Dodge
Sprinter/
Freightliner
Sprinter




Quantity / Length Item No.

Kit Mercedes Sprinter / VW Crafter High Roof	1 x 12cm - 1 x 53cm - 1 x 60cm	98655-746 * 98655-889
--	--------------------------------	--------------------------

KIT IVECO DAILY H2



≥ 2006 ≤ 2014
H2 - L2/L3

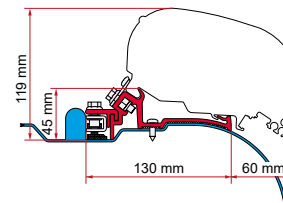

Quantity / Length Item No.


Kit Iveco Daily H2	2 x 15cm - 1 x 20cm	98655-733
--------------------	---------------------	-----------

**** KIT RENAULT MASTER H2 ≥ 2010**



≥ 2010
H2 - L2 / L3

Also for
Opel Movano
and Nissan
NV400

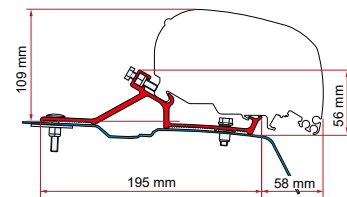

Quantity / Length Item No.


Kit Renault Master ≥ 2010	1 x 12cm - 1 x 44cm - 1 x 64cm	98655-881
---------------------------	--------------------------------	-----------

● black finish brackets * for right hand drive ** for left and right hand drive

KIT VW CRAFTER - ROOF RAIL



≥ 2017
H3 - L3/L4
Man Tge

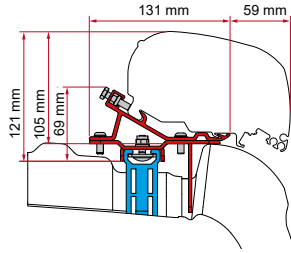

with Roof Rail




Quantity / Length Item No.

Kit VW Crafter with Roof Rail	1 x 20cm - 1 x 30cm - 1 x 40cm	98655Z036
-------------------------------	--------------------------------------	-----------

• KIT VW CRAFTER H3



≥ 2017
Man Tge
Without Roof Rail

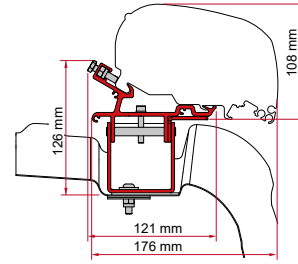

For VW Crafter L3/H3 pls choose the F80s 320cm long

For VW Crafter L4/H3 pls choose the F80s 400cm long



Quantity / Length Item No.


Kit VW Crafter H3	2 x 20cm - 1 x 32cm	98655Z043
		* 98655Z058

F40van

• ADAPTER PSA



H1
L = 4956/9 mm
Opel Vivaro C
Opel Zafira Life
Vauxhall Vivaro Life
≥ 2019

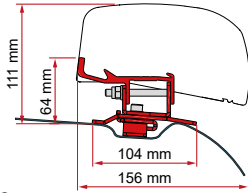

Citroën Jumpy III gen. / Spacetourer
Peugeot Traveller
Peugeot Expert III gen.
Toyota ProAce II / Toyota ProAce Verso
≥ 2016


Quantity / Length Item No.

Adapter PSA	1 x 260cm	98655Z110
-------------	-----------	-----------

• KIT RENAULT TRAFIC L1



≥ 2014
H1 - L1

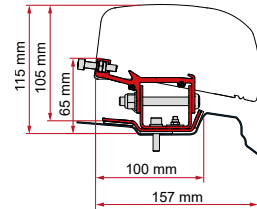

Nissan NV 300 / Fiat Talento
≥ 2014

Opel Vivaro-Vauxhall Vivaro B
≥ 2014 ≤ 2018


Quantity / Length Item No.

Kit Renault Trafic L1	2 x 26cm	** 98655Z087
-----------------------	----------	--------------

• KIT MERCEDES V CLASS



≥ 2014
H1 - L2

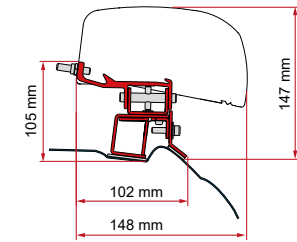


Quantity / Length Item No.

Kit Mercedes VClass	1 x 39cm - 1 x 22cm	98655Z078
---------------------	---------------------	-----------

• KIT RENAULT TRAFIC L2



≥ 2014
H1 - L2

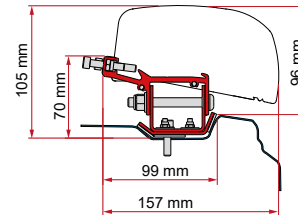

Nissan NV 300 / Fiat Talento
≥ 2014

Opel Vivaro-Vauxhall Vivaro B
≥ 2014 ≤ 2018

Quantity / Length Item No.


Kit Renault Trafic L2	2 x 26 cm	** 98655Z088
-----------------------	-----------	--------------

• KIT VW T5 / T6 RAIL



L1 / L2

new
20
24

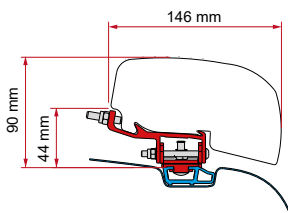

with standard rail

Quantity / Length Item No.


Kit VW T6	2x 20cm	** 98655Z165
-----------	---------	--------------

• KIT VW T5 / T6



≥ 2003
H1 - L1/L2

VW T5 / T6
Transporter / Caravelle / Multivan

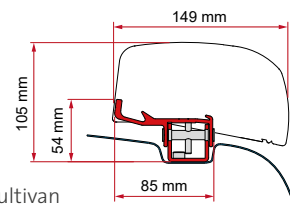

Quantity / Length Item No.


Kit VW T5 / T6	1 x 20 cm 1 x 25 cm	98655Z152
		* 98655Z153

● black finish brackets

* for right hand drive


** for left and right hand drive

• **KIT FORD CUSTOM L1**

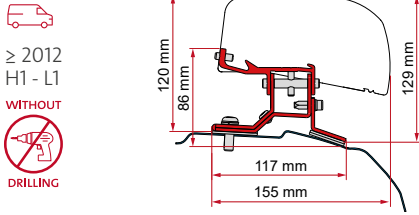


	Quantity / Length	Item No.
Kit Ford Custom L1	1 x 45,5cm - 1 x 20cm	98655Z044 * 98655Z046

• **KIT FORD CUSTOM L2**

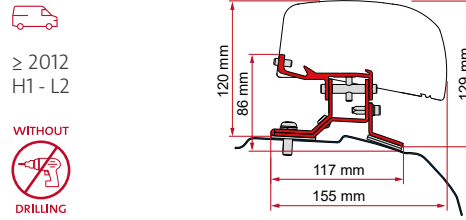

	Quantity / Length	Item No.
Kit Ford Custom L2	1 x 22,5cm - 1 x 20cm	** 98655Z045


• **KIT NISSAN NV350**

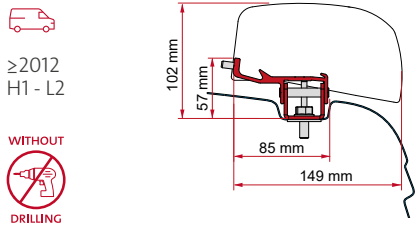

Nissan Impendulo / Isuzu Como / Mitsubishi Fuso Canter Van ≥ 2012

	Quantity / Length	Item No.
Kit Nissan NV350	1 x 20cm - 1 x 25cm	* 98655Z041

• **KIT NV200**

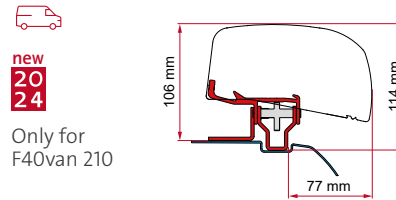


Only for F40van 210

	Quantity / Length	Item No.
Kit NV200	2 x 25cm 1 x 10cm	98655Z175

F35pro

• **KIT CAMPÉRÈVE CAP ROAD**

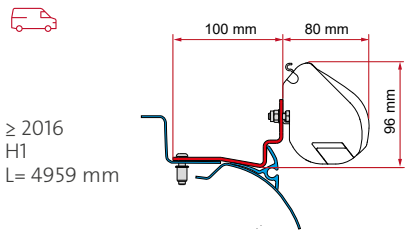


≥ 2016 H1 L= 4959 mm

Only on Rapido Autocaravan Campérève Cap Road based on Peugeot Expert III gen.

	Quantity / Length	Item No.
Kit Campérève Cap Road	2 x 12cm	** 98655Z151


• **KIT VW CADDY MAXI**

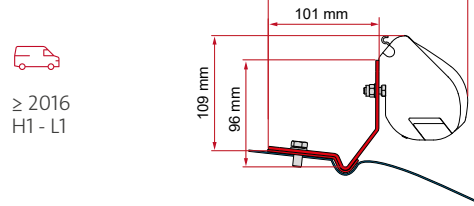

≥ 2016 H1 - L1

	Quantity / Length	Item No.
Kit VW Caddy Maxi	2 x 8cm	** 98655Z096


• **KIT COMBI RAIL BRACKET**

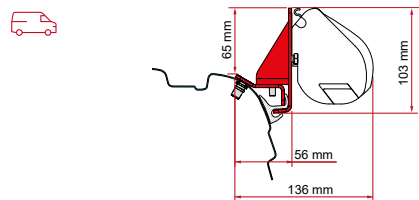

Also for models with lift roof

	Quantity / Length	Item No.
Kit Combi Rail Bracket (Rail Brandrup - Vamoose)	2 x 8cm	** 98655Z154

• **KIT VW CADDY MAXI LIFT ROOF**

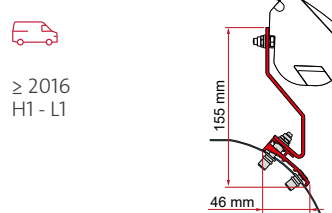


≥ 2016 H1 - L1

	Quantity / Length	Item No.
Kit VW Caddy Maxi Lift Roof	2 x 12cm	** 98655Z109


• black finish brackets * for right hand drive ** for left and right hand drive

● **KIT VW T5 / T6 MULTIRAIL REIMO**

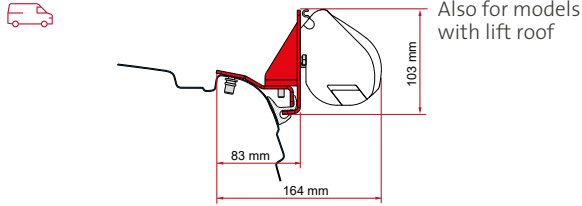


	Quantity / Length	Item No.
Kit VW T5 / T6 Multirail Reimo	2 x 8cm	** 98655Z155

● **KIT VW T6 KEPLER**

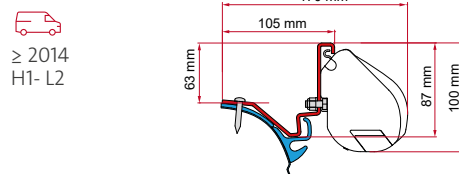


	Quantity / Length	Item No.
Kit VW T6 Kepler	2 x 10cm	98655Z033

KIT VW T5 / T6 MULTIVAN TRANSPORTER

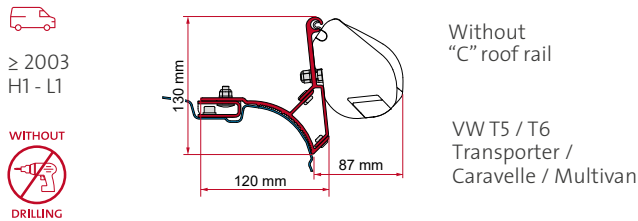


	Quantity / Length	Item No.
Kit VW T5 / T6 Multivan Transporter	2 x 21,5cm	98655Z004 * 98655Z005

KIT VW T5 / T6 MULTIVAN TRANSPORTER

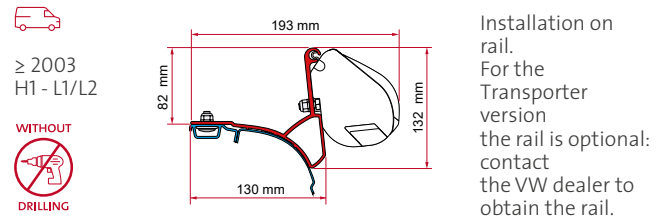


	Quantity / Length	Item No.
Kit VW T5 / T6 Multivan/ Transporter	2 x 12cm	98655-747

KIT VW T5 / T6 CALIFORNIA

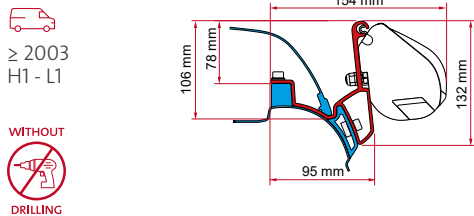


	Quantity / Length	Item No.
Kit VW T5 / T6 California	2 x 12cm	98655-748

KIT BRANDRUP VW T4

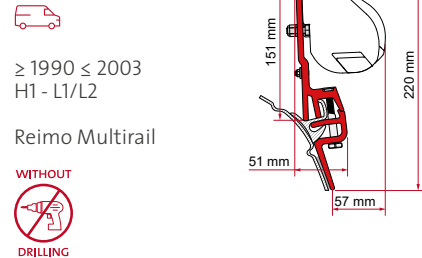


	Quantity / Length	Item No.
Kit Brandrup VW T4	2 x 8cm	98655Z011

● **KIT VW T4 / VW T4 LIFT ROOF**

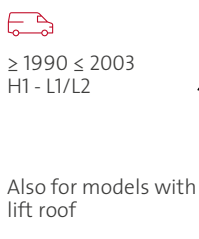

	Quantity / Length	Item No.
Kit VW T4 Lift Roof	2 x 8cm	98655-111

● **KIT VW T3 / T3 LIFT ROOF**

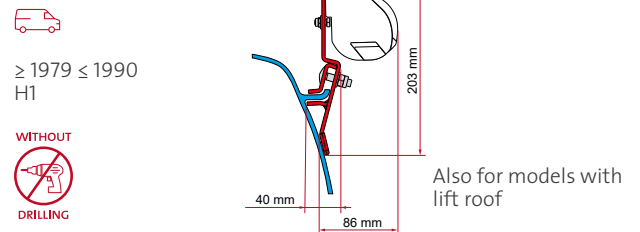

	Quantity / Length	Item No.
Kit VW T3/T3 Lift Roof	2 x 8cm	98655Z115

● black finish brackets

* for right hand drive


** for left and right hand drive

KIT CLASS V MARCO POLO



≥ 2014
H1 - L2

Not suitable for
Marco Polo with
electric roof

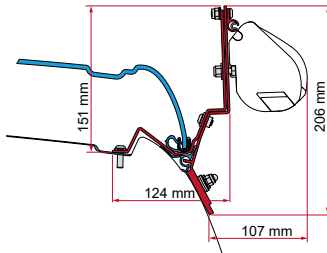

Quantity / Length

Item No.

Kit Class V
Marco Polo


1 x 12cm -
1 x 13cm

98655Z022

• KIT MERCEDES VIANO / MARCO POLO / VITO / V CLASS



H1 - L2
Viano Vito II: ≥ 2003 ≤ 2013
Viano Vito II Marco Polo:
≥ 2003 ≤ 2013
only with manual roof
V Class Vito III - Long: ≥ 2014

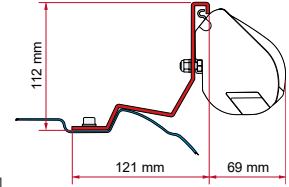

Quantity / Length

Item No.

Kit Mercedes Viano
Marco Polo / Vito / V Class


2 x 13cm

98655-887

• KIT MERCEDES VITO JULES VERNE



≥ 2014
H1 - L2

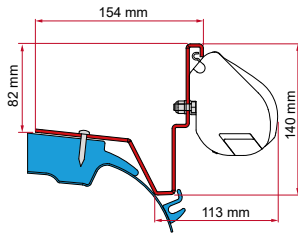

Quantity / Length

Item No.

Kit Mercedes Vito
Jules Verne

2 x 12cm


98655Z034

• KIT MERCEDES VITO / VITO MARCO POLO



≥ 1996 ≤ 2003
H1 - L1

Marco Polo:
only with manual roof

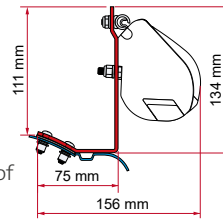

Quantity / Length

Item No.

Kit Mercedes Vito /
Vito Marco Polo


2 x 8cm

98655-682

KIT RENAULT TRAFIC / OPEL VIVARO / FIAT TALENTO / NISSAN PRIMASTAR



≥ 2001 ≤ 2014
H1 - L1/L2

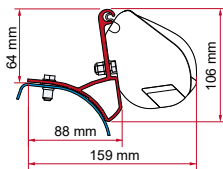

Quantity / Length

Item No.

Kit Renault Trafic / Opel
Vivaro / Fiat Talento /
Nissan Primastar

2 x 12cm


98655-893

KIT RENAULT TRAFIC / OPEL VIVARO / FIAT TALENTO / NV300 / RAPIDO MIRANDE S



≥ 2014 ≤ 2018
H1 - L1/L2
Opel/ Vauxhall Vivaro B

≥ 2014
H1 - L1/L2
Renault Trafic/ Nissan
Nv300/ Fiat Talento

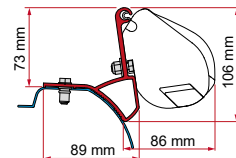

≥ 2015
H1 - L1
Renault Trafic
Dreamer
Mirande S/
Campereve
Mirande S

Quantity / Length

Item No.

Kit Renault Trafic / Opel
Vivaro / Fiat Talento /
NV300 / Rapido Mirande S

2 x 12cm


98655Z020

• KIT NISSAN NV200



H1 - L1

Nissan NV 200 ≥ 2009
Nissan Evalia ≥ 2010
Mitsubishi Delica V ≥ 2007

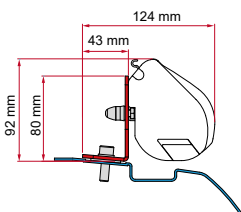

Quantity / Length

Item No.

Kit Nissan NV200

3 x 8cm


98655Z026

• KIT PSA



H1
L = 4956/9 mm

Opel Vivaro C
Opel Zafira Life
Vauxhall Vivaro Life
≥ 2019

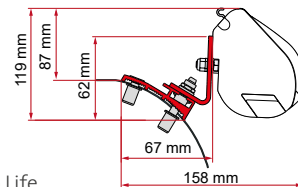

Citroën Jumpy III gen.
/ Spacotourer
Peugeot Traveller
Peugeot Expert III gen.
Also for models with
lift roof
Toyota ProAce II /
Toyota ProAce Verso
≥ 2016

Quantity / Length

Item No.

Kit PSA


2 x 20cm

** 98655Z095

● **KIT FORD CUSTOM LIFT ROOF**



H1
L1 / L2

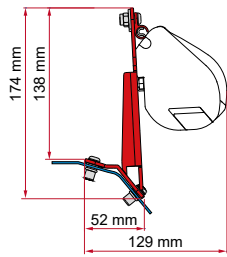

Attention:
opening/closing
operations of
the awning
must be
performed with
the sliding door
closed

Quantity /
Length

Item No.

Kit Ford Custom Lift Roof

98655Z169

Kit Ford Custom Lift Roof
- RHD

2 x 12cm


* 98655Z170

● **KIT FORD CUSTOM CAP COAST / CAPLAND /CAPLIFE**



H1 - L1
Cap Coast ≥ 2018

H1 - L2
Cap Land / Cap Life
≥ 2019

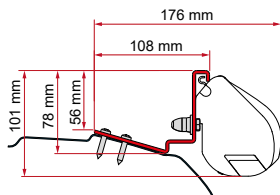

Quantity / Length

Item No.

Kit Ford Custom Cap Coast
/ Cap Land /Cap Life


2 x 12cm

98655Z027

● **KIT FORD CUSTOM CAPLAND / CAPFUN**



≥ 2015 ≤ 2018
H1 - L2

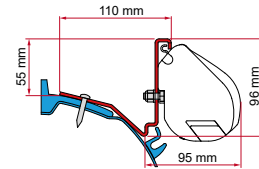

Quantity / Length

Item No.

Kit Ford Custom Cap Land /
Cap Fun


2 x 12cm

98655Z035

● **KIT STANDARD**



Installation on
Roof Rails

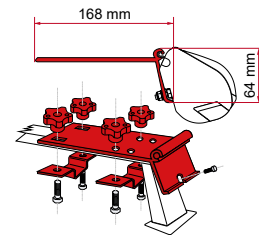

WITHOUT



DRILLING

Quantity / Length


Item No.

Kit Standard

2 x 8cm

98655-142

RAIL

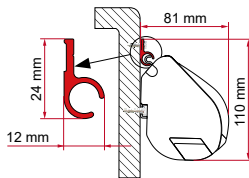

Quantity / Length

Item No.

Rail


1 x 300cm

02361-01A

1 x 400cm

02361-01C

KIT ERIBA TOURING

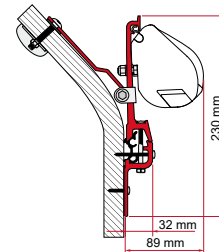

Quantity / Length

Item No.

Kit Eriba Touring


2 x 8cm

98655Z009

KIT AUTO



Installation on
Roof Rails

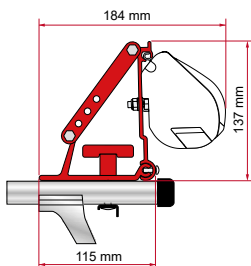

Quantity / Length

Item No.

Kit Auto

2 x 8cm

98655-310


● black finish brackets

* for right hand drive

** for left and right hand drive


Compass

KIT VW T5 / T6 TRANSPORTER / MULTIVAN COMPASS

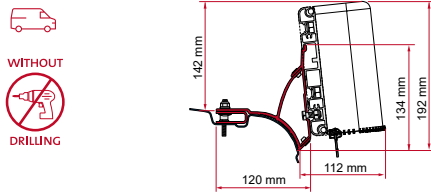

	Quantity / Length	Item No.
Kit VW T5/T6 Transporter / Multivan Compass	1 x 20cm - 1 x 25cm	98655Z018


KIT RENAULT TRAFIC

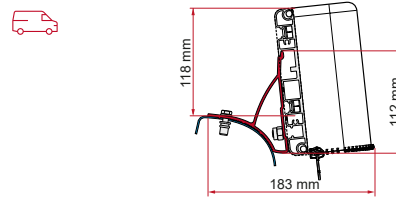

	Quantity / Length	Item No.
Kit Renault Trafic $\geq 2001 \leq 2015$	2 x 16cm	98655Z031
Kit Renault Trafic ≥ 2015		98655Z032


KIT ROOF RAIL

Rail max width 5,5cm
 Min. 2 Kits to install an awning

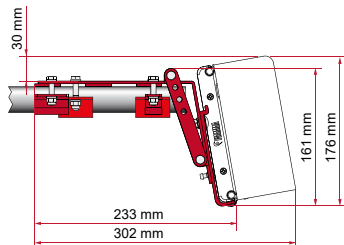

	Quantity / Length	Item No.
Kit Roof Rail	1 x 12cm	98655-770

KIT AUTO

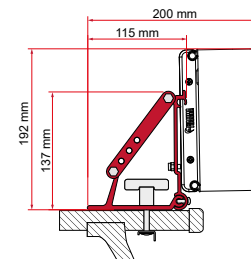

	Quantity / Length	Item No.
Kit Auto	2 x 8cm	98655-310

CaravanStore

KIT HOBBY CARAVANSTORE

Supplementary kit to fix the CaravanStore on Hobby caravans, 2009 production, edition 6.



	Item No.
Kit Hobby CaravanStore	98655-034