

# F45

Adapter AS	48
Adapter D	48
Adapter T / U / B / C	49
Arca	48
Bailey MK 1	52
Bailey MK 2	52
Brandrup VW T4	54
Bürstner	48
Challenger Chausson	48
Combi Rail Bracket (Rail Brandrup - Vamoose)	54
Dethleffs Globebus	50
Eriba Touring	52
Eura Mobil Karmann	50
Fiat Ducato - Renault Master	53
Fiat Ducato H2 - Citroën Jumper H2 - Peugeot Boxer H2 ( ≥ 1994 ≤ 2006)	53
Fiat Ducato H2 - Citroën Jumper H2 - Peugeot Boxer H2 ( ≥ 2006)	53
Fiat Ducato H2 Lift Roof - Hymercar / Pössl Lift Roof	53
Fiat Ducato H2 Roof Rail - Alu-Line Style	53
Fiat Ducato with Roof Rack	52
Fiberglass Roof	54
Fleurette	49
Ford Custom	55
Ford Custom Nugget High Roof	55
Ford Custom Nugget Lift Roof	53
Ford Transit	52
Ford Transit H3	52
High Roof Adapter Westfalia	56
Hymer / Van B2	49
Hymer ≥ 2016	51
Hymer Exsis	49
Hymer S	50
Hymer S-E Klasse	50
Hymercamp	51
Kit AS	48
Kit Auto	55
Kit Caravan	52
Kit Multi	53
Kit Roof Adapter	48
Kit Roof Rail	55
Kit S	48
Kit Van	54
Kit Wall Adapter	49
Laika Ecovip - Bürstner - Hobby / Adapter Laika Ecovip	49
Laika Ecovip 07	50
Laika Rexosline - Ecovip 07 - Kreos 09	50
Laika X	50
Mercedes Sprinter H3 - Sprinter H3 Westfalia - VW Crafter H3	54
Mercedes Vito	56

Pilote Explorateur	50
Rail	48
Rapido	51
Rapido Serie 6	51
Rapido Serie 7-8	51
Rapido Serie 9	51
Rapido Serie 9dF - 9M - 10	52
Renault Master H2 - Opel Movano H2 - Nissan Interstar H2	53
Renault Trafic - Opel Vivaro - Nissan NV 300 - Fiat Talento	55
Renault Trafic - Opel Vivaro - Nissan Primastar	55
V Class Marco Polo	55
Voyageur	51
VW T3	55
VW T4 - VW T4 Lift Roof	54
VW T5 / T6 Multivan Transporter	54
VW T5 / T6 Multirail Reimo	54
Wingamm Oasi	52

# F40van

Adapter PSA	
Ford Custom L1	
Ford Custom L2	
Mercedes V Class	62
Nissan NV 350	
Renault Trafic L1	
Renault Trafic L2	
VW T5 / T6	

# Compass

Kit Auto	
Kit Roof Rail	
Renault Trafic	66
VW T5 / T6 Transporter / Multivan Compass	

All bracket codes in the following pages are suitable for the left guide unless otherwise indicated.

(\*right guide - \*\*right and left guide)

## F65 / F80

Adapter Caravan Roof	58
Adria Caravan	58
Arca Mobilvetta K-Yacht	57
Autocruise	58
Bailey	58
Caravan Hobby	59
Carthago Chic Rapido i80 - i90	57
Carthago Malibu	57
Elddis	56
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L2/L3 (≥ 2006)	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L4 (≥ 2006 - Low profile)	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - L4 (≥ 2006)	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 (≥ 1994 ≤ 2006 - Low profile)	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 (≥ 1994 ≤ 2006)	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - H3	60
Fiat Ducato / Citroën Jumper / Peugeot Boxer - Low profile (L2/L3 - ≥ 2006)	60
Fiat Ducato H2 Skyroof	59
Ford Transit H3	59
Ford Transit L3 H3	59
Giottiline - Fendt	56
Hobby Caravan	59
Hobby Easy / Ontour / Adria Adora	59
Hobby Excellent	59
Hobby Premium	59
Hobby Premium & Ontour	59
Hymmer	58
Iveco Daily H2	61
Kit Caravan Roof	58
Kit Caravan Standard	58
Kit Fixing Bar	59
Kit Standard	56
Laika Kreos 2005	56
Laika Kreos 21	56
Laika Rexosline / Kreos 09	56
LMC - TEC	57
LMC Adapter Caravan Roof	58
Mercedes Sprinter - Roof Rail	61
Mercedes Sprinter / VW Crafter High Roof	61
Rapido C55i C86i	57
Rapido C Line	57
Rapido Distinction	57
Renault Master H2	61
Renault Master H2 - ≥ 2010	61
Smart Clamp Ducato	60
Sprinter F65eagle	61

Standard F65eagle 400	57
VW Crafter - Roof Rail	61
VW Crafter H3	61

## F35pro

Brandrup VW T4	64
Campérève Cap Road	63
Class V Marco Polo	64
Combi Rail Bracket (Rail Brandrup - Vamoose)	63
Eriba Touring	66
Ford Custom	65
Ford Custom Cap Coast / Capland / Caplife	65
Ford Custom Capland / Capfun	65
Kit Auto	66
Kit Standard	65
Mercedes Viano / Marco Polo / Vito / V Class	64
Mercedes Vito / Vito Marco Polo	64
Mercedes Vito Jules Verne	64
Nissan NV200	65
PSA	65
Rail	65
Renault Trafic / Opel Vivaro / Fiat Talento / Nissan Primastar	64
Renault Trafic / Opel Vivaro / Fiat Talento / Rapido Mirande S	65
VW Caddy Maxi	63
VW Caddy Maxi Lift Roof	63
VW T3 / T3 Lift Roof	64
VW T4 Lift Roof	64
VW T5 / T6 California	63
VW T5 / T6 Multirail Reimo	63
VW T5 / T6 Multivan Transporter	63
VW T5 / T6 Multivan Transporter (Roof Rail)	63
VW T6 Kepler	63


## CaravanStore

Hobby CaravanStore	66
--------------------	----

All bracket codes in the following pages are suitable for the left guide unless otherwise indicated.  
(\*right guide - \*\*right and left guide)


# F45

## ADAPTER AS / KIT S / KIT AS

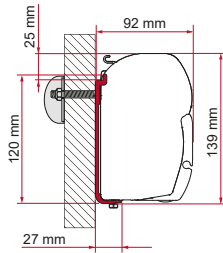


	Quantity / Length	Item No.
Adapter AS 300	1 x 300cm	98655-503
Adapter AS 350	1 x 350cm	98655-504
Adapter AS 400	1 x 400cm	98655-505
Adapter AS 450	1 x 450cm	98655-928
Kit S 120	1 x 12cm	98655-392
Kit S 400	1 x 40cm	98655-381
Kit AS 110 (Standard from 190 to 230cm)	2 x 12cm	98655Z007
Kit AS 120 (Standard from 260 to 400cm)	2 x 12cm - 1 x 8cm	98655-391
Kit AS 400 (Standard from 450 to 500cm)	2 x 40cm - 1 x 12cm	98655-390
Kit AS 400 L (Standard from 550cm)	4 x 40cm	98655-393

## ADAPTER D

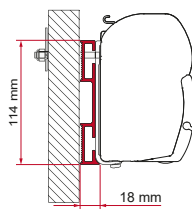


	Quantity / Length	Item No.
Adapter D	1 x 8cm	98655-021
	1 x 12cm	98655-022

## KIT / ADAPTER BÜRSTNER

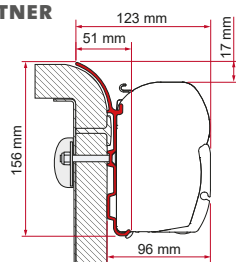

	Quantity / Length	Item No.
Kit Bürstner	2 x 12cm - 1 x 8cm	98655-749
Adapter Bürstner	1 x 450cm	98655-661

## RAIL

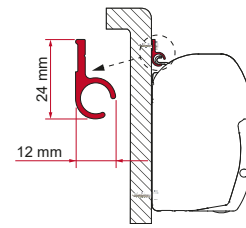


	Quantity / Length	Item No.
Rail	1 x 300cm	02361-01A
	1 x 400cm	02361-01C

## KIT CHALLENGER CHAUSSON




Eden Allegro

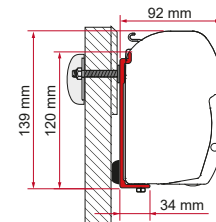


	Quantity / Length	Item No.
Kit Challenger Chausson	2 x 8cm - 1 x 40cm	98655-258

## KIT ROOF ADAPTER

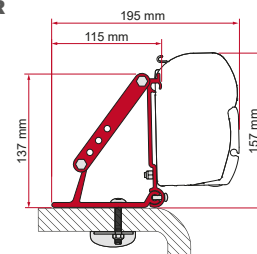

	Quantity / Length	Item No.
Kit Roof Adapter	3 x 8cm	98655-316

## ADAPTER ARCA

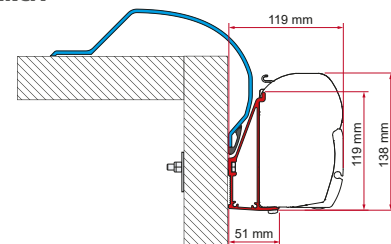




	Quantity / Length	Item No.
Adapter Arca	1 x 400cm	98655-852

● black finish brackets

\* for right hand drive



\*\* for left and right hand drive

**ADAPTER T / U / B / C**

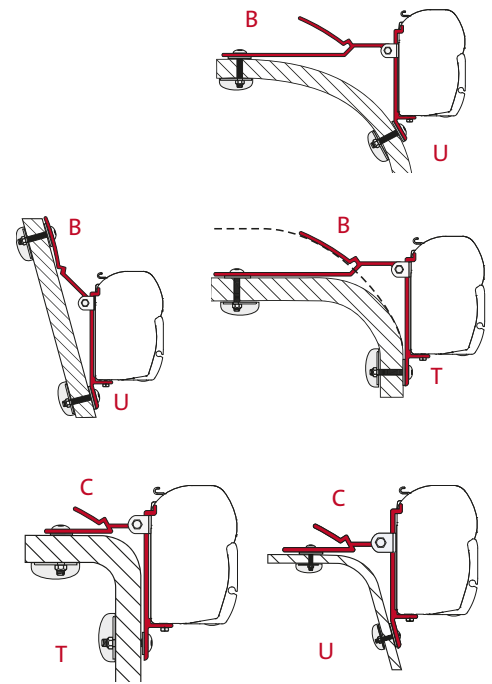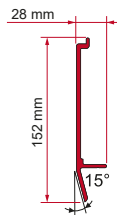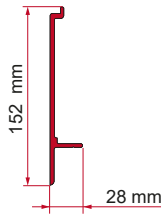

	Quantity	Item No.
Adapter T	1 pc	02437-01-

	Quantity	Item No.
Adapter U	1 pc	02437A01-

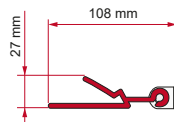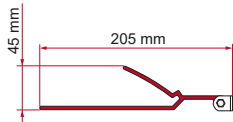


	Quantity	Item No.
Adapter B	1 pc	02096-01-

	Quantity	Item No.
Adapter C	1 pc	02097-01-

**KIT / ADAPTER HYMER / VAN B2**




\*Hymermobile B  
Classic B  
Klasse  
Starline

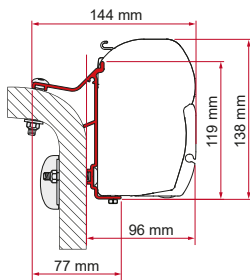


	Quantity / Length	Item No.
Kit Hymer / Van B2	2 x 8cm - 2 x 35cm	98655-243
	1 x 350cm	98655-244
Adapter Hymer / Van B2*	1 x 400cm	98655-245
	1 x 450cm	98655-246

**KIT WALL ADAPTER**

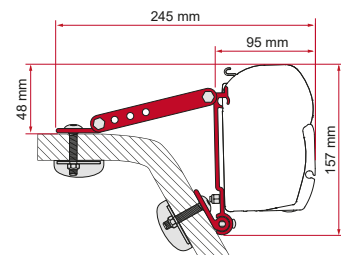


	Quantity / Length	Item No.
Kit Wall Adapter	3 x 8cm	98655-318

**KIT FLEURETTE**

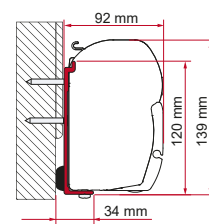

	Quantity / Length	Item No.
Kit Fleurette	1 x 8cm - 2 x 12cm	98655-082

**KIT LAIKA ECOVIP - BÜRSTNER - HOBBY / ADAPTER LAIKA ECOVIP**

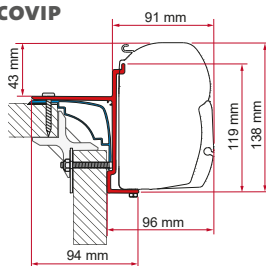


	Quantity / Length	Item No.
Kit Laika Ecovip - Bürstner - Hobby	3 x 15cm - 1 x 12cm	98655-357
Adapter Laika Ecovip	1 x 390cm	98655-469

**ADAPTER HYMER EXSIS**



≤ 2005

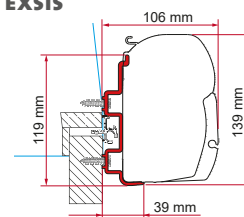


	Quantity / Length	Item No.
Adapter Hymer Exsis	1 x 300cm	98655-688

- black finish brackets
- \* for right hand drive
- \*\* for left and right hand drive

**KIT LAIKA ECOVIP 07**



For awnings from 4m

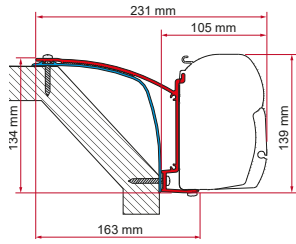

Quantity / Length


Item No.

Kit Laika Ecovip 07

3 x 15cm

98655-467

**ADAPTER EURA MOBIL KARMANN**

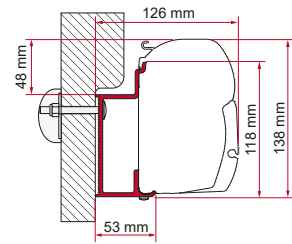

Quantity / Length

Item No.

Adapter Eura Mobil Karmann

1 x 350cm

98655-764


1 x 400cm

98655-765

1 x 450cm

98655-766

**KIT LAIKA REXOSLINE - ECOVIP 07 - KREOS 09**

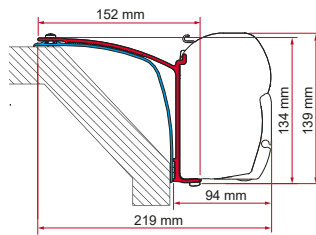

Quantity / Length


Item No.

Kit Laika Rexosline - Ecovip 07 - Kreos 09

3 x 15cm

98655-418

**KIT LAIKA X**

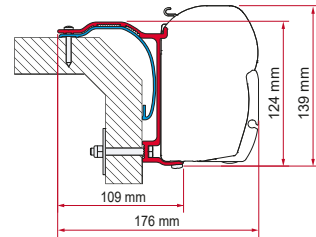

Quantity / Length


Item No.

Kit Laika X

3 x 15cm

98655-761

**KIT DETHLEFFS GLOBEBUS**

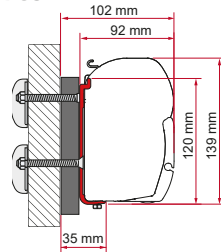

Quantity / Length


Item No.

Kit Dethleffs Globebus

3 x 12cm

98655-730

**KIT PILOTE EXPLORATEUR**

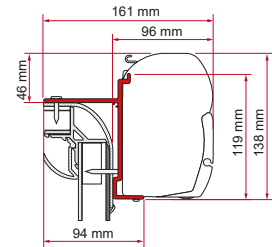

Quantity / Length


Item No.

Kit Pilote Explorateur

3 x 15cm

98655-729

**KIT HYMER S**

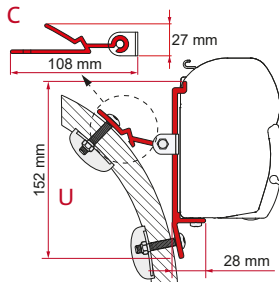

Quantity / Length

Item No.

Kit Hymer S


3 x 8cm -  
3 x 8cm

02097-01- (1pc) +  
02437A01- (1pc)

**ADAPTER HYMER S-E KLASSE**



Hymermobile S Klasse 650, 740, 820 Esterel ≥ 2007

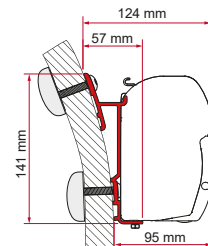

Quantity / Length

Item No.

Adapter Hymer S-E Klasse

1 x 400cm

98655-249

1 x 450cm

98655-250

● black finish brackets


\* for right hand drive

\*\* for left and right hand drive

**KIT / ADAPTER HYMERCAMP**




\* Hymercamp Swing  
Starline  
Hobby Van  
Caravan Hobby 09

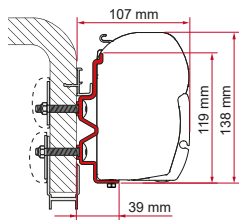


	Quantity / Length	Item No.
Kit Hymercamp	3 x 12cm	98655-278
	Quantity / Length	Item No.
	1 x 300cm	98655-277
	1 x 350cm	98655-276
Adapter Hymercamp*	1 x 400cm	98655-274
	1 x 450cm	98655-275
	1 x 500cm	98655-273

**KIT / ADAPTER HYMER ≥ 2016**

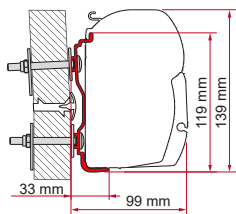

	Quantity / Length	Item No.
Kit Hymer ≥ 2016	3 x 12cm	98655Z059
	Quantity / Length	Item No.
	1 x 300cm	98655Z060
	1 x 350cm	98655Z061
Adapter Hymer ≥ 2016	1 x 400cm	98655Z062
	1 x 450cm	98655Z063
	1 x 500cm	98655Z064

**KIT VOYAGEUR**

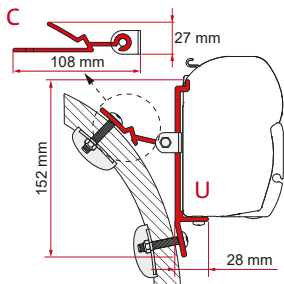


	Quantity / Length	Item No.
Kit Voyageur	3 x 8cm - 3 x 8cm	02097-01- (1 pc) + 02437A01- (1pc)

**ADAPTER RAPIDO SERIE 7 - 8**



Fiat 860F  
Fiat Garage 860F,  
870F, 890F

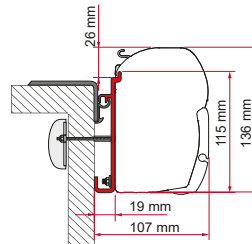


	Quantity / Length	Item No.
Kit Rapido Serie 7-8	2 x 8cm - 1 x 100cm	9865-222

**ADAPTER RAPIDO**




Fiat 708F, 701F, 740F  
Fiat Garage 660,  
770F, 772F  
Mercedes 749M,  
779M

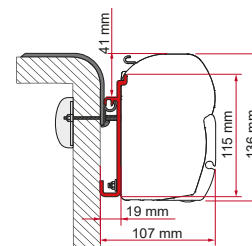


	Quantity / Length	Item No.
Adapter Rapido	1 x 350cm	98655-398
	1 x 400cm	98655-399

**ADAPTER RAPIDO SERIE 6**

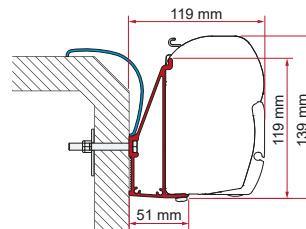

	Quantity / Length	Item No.
Adapter Rapido Serie 6	1 x 350cm	98655-895
	1 x 400cm	98655-896

**KIT RAPIDO SERIE 9**

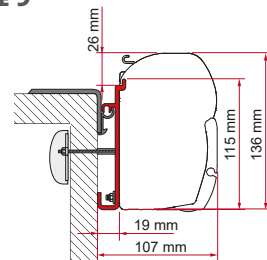


	Quantity / Length	Item No.
Kit Rapido Serie 9	2 x 8cm - 2 x 12cm	98655-223

**ADAPTER RAPIDO SERIE 9dF - 9M - 10**



≥ 2011

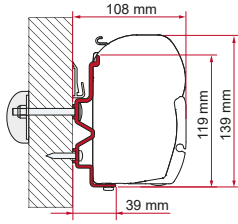


Quantity / Length	Item No.
1 x 350cm	98655-916
1 x 400cm	98655-917
1 x 450cm	98655-918

Adapter Rapido Serie 9dF - 9M - 10

**ADAPTER WINGAMM OASI**



≥ 2006

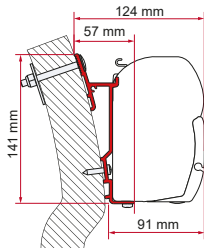


Quantity / Length	Item No.
1 x 230cm	98655-929
1 x 300cm	98655-930
1 x 350cm	98655-931

Adapter Wingamm Oasi

**KIT ERIBA TOURING**




≤ 06/2013

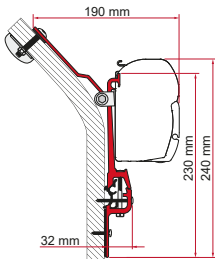

Quantity / Length	Item No.
3 x 8cm	98655-283

Kit Eriba Touring

**KIT CARAVAN**

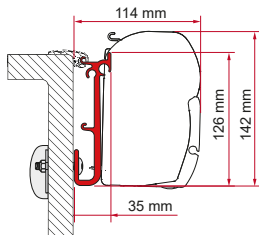


Quantity / Length	Item No.
3 x 13cm	98655-252

Kit Caravan

**KIT BAILEY MK 1**



≥ 2011 ≤ 2013

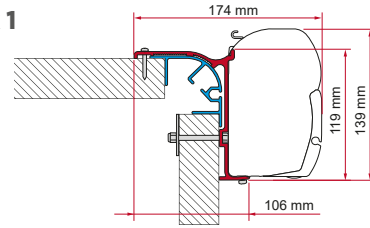


Quantity / Length	Item No.
3 x 15cm	98655-879

Kit Bailey MK 1

**KIT BAILEY MK 2**



≥ 2014

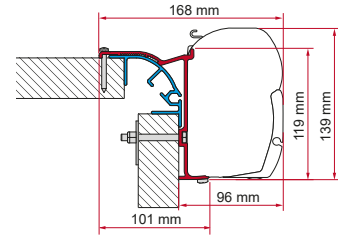


Quantity / Length	Item No.
3 x 15cm	98655-946

Kit Bailey MK 2

**KIT FORD TRANSIT**



H2 ≤ 2014  
H3 ≥ 2014

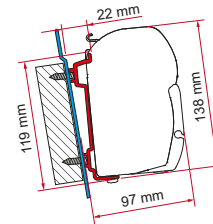

Quantity / Length	Item No.
2 x 40cm	98655-741


Kit Ford Transit

**KIT FORD TRANSIT H3**



H3 - L3

new  
2023

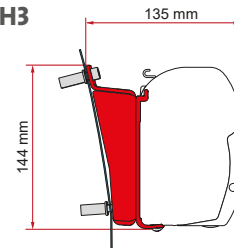

Quantity / Length	Item No.
2 x 40cm - 1 x 8cm	98655Z146


Kit Ford Transit H3

**KIT FIAT DUCATO WITH ROOF RACK**



≥ 2006  
H2 - L2/L3

Citroën Jumper  
Peugeot Boxer  
≥ 2006

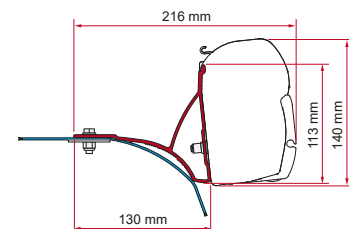

Quantity / Length	Item No.
3 x 12cm	98655-485

Kit Fiat Ducato with Roof Rack

● black finish brackets


\* for right hand drive

\*\* for left and right hand drive

**KIT FIAT DUCATO H2 - CITROËN JUMPER H2 - PEUGEOT BOXER H2**



≥ 1994 ≤ 2006  
H2 - L2/L3

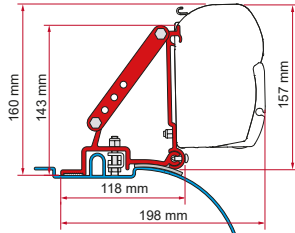

Quantity / Length

Item No.

Kit Fiat Ducato H2  
Citroën Jumper H2  
Peugeot Boxer H2


2 x 8cm

98655-680

**• KIT FIAT DUCATO H2 LIFT ROOF HYMYRCAR / PÖSSL LIFT ROOF**



≥ 2006  
H2 - L2/L3/L4

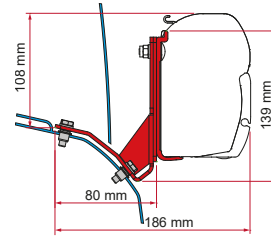

Quantity / Length

Item No.

Kit Fiat Ducato H2 Lift  
Roof- Hymyrcar  
Pössl Lift Roof


3 x 12cm

98655Z028

**KIT FIAT DUCATO H2 - CITROËN JUMPER H2 - PEUGEOT BOXER H2**



≥ 2006  
H2 - L2/L3  
H2 - L4 (2x)

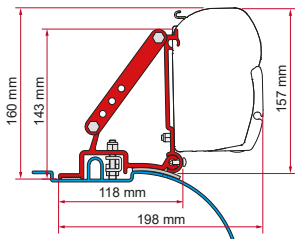

Quantity / Length

Item No.

Kit Fiat Ducato H2  
Citroën Jumper H2  
Peugeot Boxer H2


2 x 8cm

98655-755

**KIT MULTI**



The only modular bracket fitted to compensate the curved roof of the vehicle. Renault Master 98, Fiat Ducato, Citroën Jumper, Peugeot Boxer

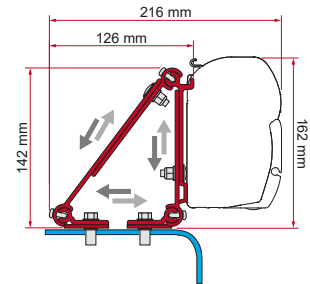

Quantity / Length

Item No.

Kit Multi

1 x 8cm


98655-011

**KIT FIAT DUCATO H2 ROOF RAIL - ALU-LINE STYLE**



≥ 2006  
H2 - L2/L3

Citroën Jumper  
Peugeot Boxer  
≥ 2006

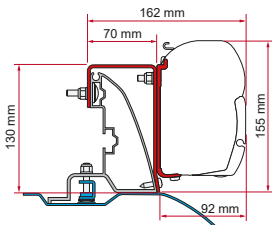

Quantity / Length

Item No.

Kit Fiat Ducato H2 Roof  
Rail Alu-line Style

3 x 12cm


98655-625

**KIT RENAULT MASTER H2 - OPEL MOVANO H2 - NISSAN INTERSTAR H2**



H2 - L2/L3

Renault Master  
≥ 1997 ≤ 2009  
Opel Movano  
≥ 1998 ≤ 2010  
Nissan Interstar  
≥ 1998 ≤ 2011

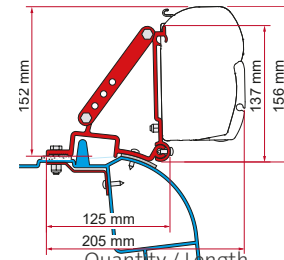

Quantity / Length

Item No.

Kit Renault Master H2 -  
Opel Movano H2 -  
Nissan Interstar H2


3 x 8cm

98655-681

**• KIT FORD CUSTOM NUGGET LIFT ROOF**



≥ 2015  
H1 - L1

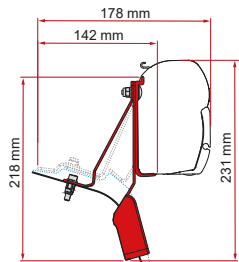

Quantity / Length

Item No.

Kit Ford Custom Nugget  
Lift Roof

2 x 8cm

98655Z114


**KIT FIAT DUCATO - RENAULT MASTER**



H1/H2

Iveco 35C13 City  
(Fiat New Daily)  
Renault Master ≥ 03/1998

Fiat Ducato  
Peugeot J5  
Citroën C25  
≥ 1981 ≤ 1994

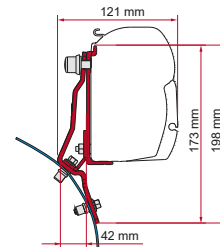

Quantity / Length

Item No.

Kit Fiat Ducato  
Renault Master

2 x 14cm

98655-286




**KIT VAN**



For awnings up to 3.50m long

Both A and B brackets are delivered as standard with the kit.

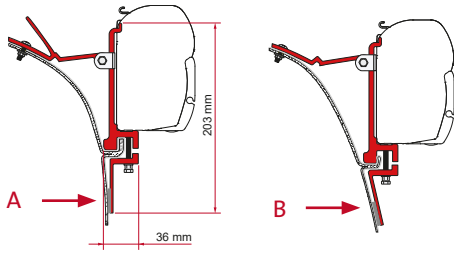


H1-H2  
Peugeot J5  
Citroën C25  
Fiat Ducato ≤ 1994

Ford Transit ≤ 2014 - H2  
Mercedes Sprinter 208 D KB

Quantity / Length      Item No.

Kit Van      2 x 8cm      98655-017

**KIT FIBERGLASS ROOF**

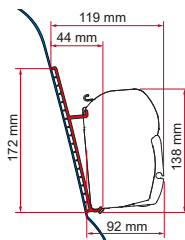

Quantity / Length      Item No.

Kit Fiberglass Roof      2 x 40cm      98655-744


**KIT MERCEDES SPRINTER H3 - SPRINTER H3 WESTFALIA - VW CRAFTER H3**



H3

Mercedes / Dodge / Freightliner Sprinter ≥ 2006

VW Crafter I gen. ≥ 2006 ≤ 2016

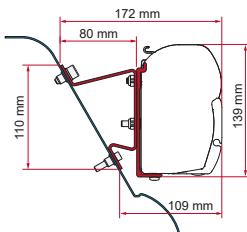

Quantity / Length      Item No.

Kit Mercedes Sprinter H3 - Sprinter H3 Westfalia - VW Crafter H3      3 x 8cm      98655-591


**KIT COMBI RAIL BRACKET**



new 2023

≥ 2003 H1 - L1

VW T5 / T6 Transporter / Caravelle / Multivan

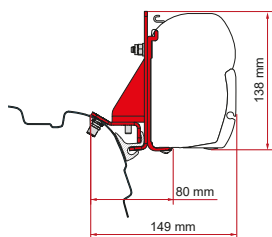

Also for models with lift roof

Quantity / Length      Item No.


Kit Combi Rail Bracket (Rail Brandrup - Vamoose)      2 x 8cm      \*\* 98655Z147

**KIT VW T5 / T6 MULTIVAN TRANSPORTER**



≥ 2003 H1 - L1

VW T5 / T6 Transporter / Caravelle / Multivan

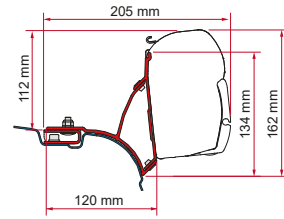

Without "C" roof rail



Quantity / Length      Item No.

Kit VW T5 / T6 Multivan Transporter      2 x 21,5cm      98655-647  
 Kit VW T5 / T6 Multivan Transporter      2 x 21,5cm      \* 98655-648


**KIT VW T5 / T6 MULTIRAIL REIMO**



new 2023

≥ 2003 H1 - L1

VW T5 / T6 Transporter / Caravelle / Multivan

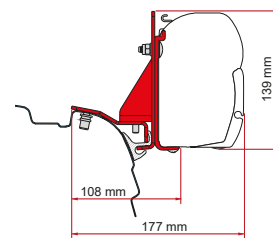

Also for models with lift roof

Quantity / Length      Item No.


Kit VW T5 / T6 Multirail Reimo      2 x 8cm      \*\* 98655Z156

**KIT VW T4 - VW T4 LIFT ROOF**



≥ 1990 ≤ 2003 H1 - L1/L2

Also for models with lift roof

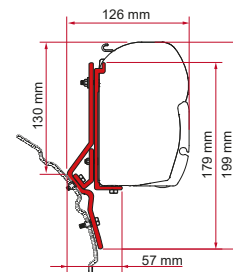

Quantity / Length      Item No.


Kit VW T4 - VW T4 Lift Roof      2 x 14cm      98655-292

**KIT BRANDRUP VW T4**



≥ 1990 ≤ 2003 H1 - L1/L2

Reimo Multirail

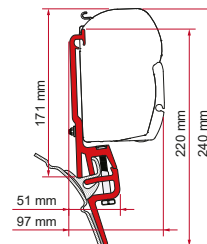

Quantity / Length      Item No.

Kit Brandrup VW T4      2 x 8cm      98655Z011

• **KIT VW T3**




≥ 1979 ≤ 1990  
H1

Also for models with lift roof



DRILLING

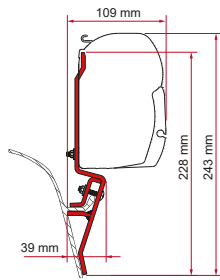

Quantity / Length

Item No.

Kit VW T3

2 x 8cm


98655-035

**KIT ROOF RAIL**



Rail max width 5,5cm

Min. 2 Kits to install an awning

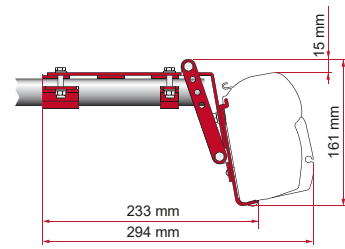

Quantity / Length

Item No.

Kit Roof Rail

1 x 12cm


98655-770

**KIT RENAULT TRAFIC - OPEL VIVARO - NISSAN NV300 - FIAT TALENTO**



≥ 2014  
H1 - L1/L2

Opel Vivaro B  
Vauxhall Vivaro B  
≥ 2014 ≤ 2018

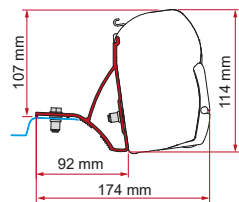

Quantity / Length

Item No.

Kit Renault Traffic -  
Opel Vivaro - Nissan  
NV300 - Fiat Talento


2 x 16cm

98655Z021

**KIT V CLASS MARCO POLO**



≥ 2014  
H1 - L2  
Not suitable for Marco Polo with electric roof

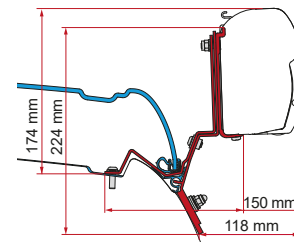

Quantity / Length

Item No.

Kit V Class  
Marco Polo


1 x 12cm -  
1 x 13cm

98655Z022

**KIT FORD CUSTOM NUGGET HIGH ROOF**



≥ 2015  
H2 - L2

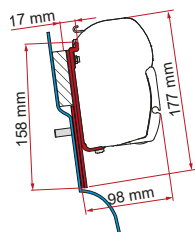

Quantity / Length

Item No.

Kit Ford Custom Nugget - High Roof


2 x 12cm

98655Z023

**KIT RENAULT TRAFIC - OPEL VIVARO - NISSAN PRIMASTAR**



≥ 2001 ≤ 2014  
H1 - L1/L2

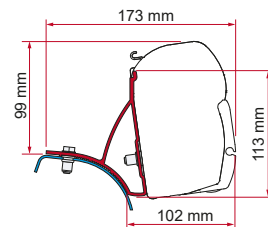

Quantity / Length

Item No.

Kit Renault Traffic -  
Opel Vivaro -  
Nissan Primastar

2 x 16cm


98655-854

• **KIT FORD CUSTOM**



≥ 2012  
H1 - L1

Only for use with the awning F45s 2.60m

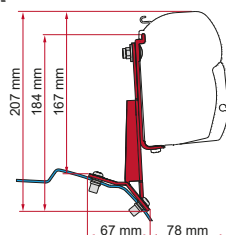

Attention: opening/closing operations of the awning must be performed with the sliding door closed.

Quantity / Length

Item No.

Kit Ford Custom


2 x 12cm

98655Z112

2 x 12cm

\* 98655Z136

**KIT AUTO**

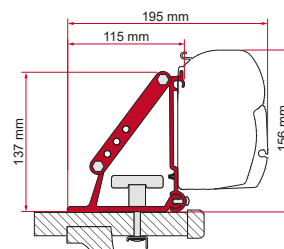

Quantity / Length


Item No.

Kit Auto

2 x 8cm

98655-310

**KIT HIGH ROOF ADAPTER WESTFALIA**

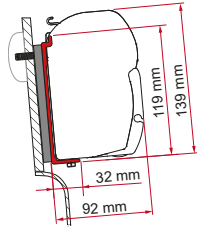


Quantity / Length      Item No.

Kit High Roof Adapter Westfalia      2 x 12cm      98655-317

**KIT MERCEDES VITO**



≥ 1996 ≤ 2003  
H1 - L1

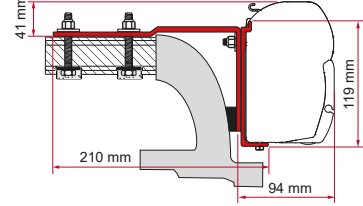


Quantity / Length      Item No.

Kit Mercedes Vito      2 x 14cm      98655-284

**F80 / F65**


**KIT STANDARD**

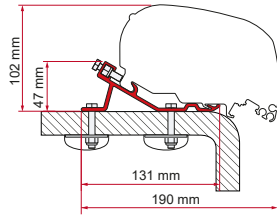

Quantity / Length      Item No.

Kit Standard      3 x 20cm      98655-855

**KIT LAIKA REXOSLINE / KREOS 09**

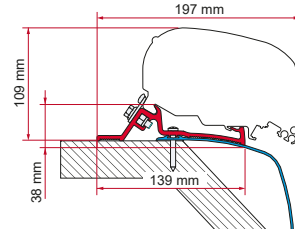


Quantity / Length      Item No.

Kit Laika Rexosline / Kreos 09      4 x 15cm      98655-419

**KIT GIOTILINE - FENDT**



For Genetics / Graal

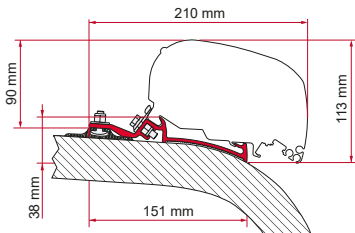


Quantity / Length      Item No.

Kit Giotiline - Fendt      3 x 15cm      98655-725

**KIT LAIKA KREOS 2005**




≥ 2005

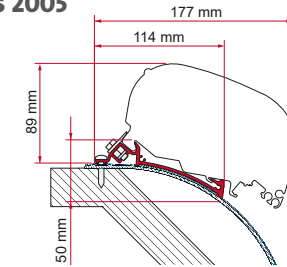

Quantity / Length      Item No.

Kit Laika Kreos 05      3 x 15cm      98655-698

**ADAPTER ELDDIS**

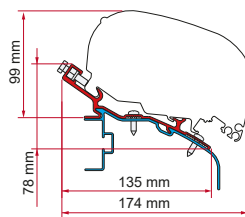


Quantity / Length      Item No.

Adapter Elldis      1 x 370cm      98655-629  
1 x 400cm      98655-630

**KIT LAIKA KREOS**



≥ 2021

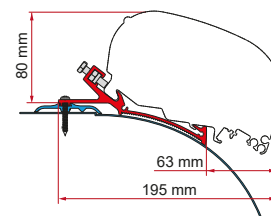

Quantity / Length      Item No.


Kit Laika Kreos 21      4 x 15cm      98655Z119

● black finish brackets

\* for right hand drive

\*\* for left and right hand drive

**KIT ARCA MOBILVETTA K-YACHT**

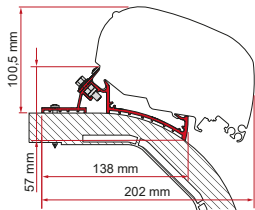

Quantity / Length

Item No.

Kit Arca Mobilvetta K-Yacht


3 x 15cm

98655Z079

**ADAPTER RAPIDO C55i C86i**



new  
20  
23

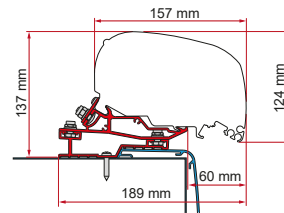

Quantity / Length

Item No.

Adapter Rapido C55i C86i


1 x 500cm

98655Z138

**ADAPTER CARTHAGO CHIC RAPIDO i80 - i90**



≤ 2014

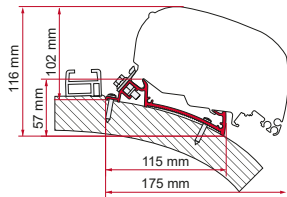

Quantity / Length

Item No.

Adapter Carthago Chic Rapido i80 - i90

1 x 340cm

98655Z135

1 x 400cm

98655-736

1 x 450cm

98655-737


1 x 490cm

98655-738

1 x 550cm

98655Z130

**ADAPTER STANDARD F65EAGLE 400**

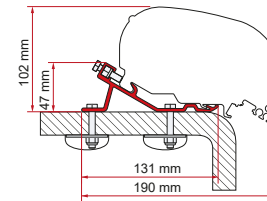

Quantity / Length


Item No.

Adapter Standard F65eagle 400

1 x 400cm

98655-969

**ADAPTER LMC - TEC**

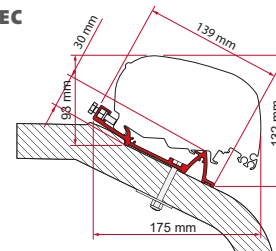

Quantity / Length

Item No.

Adapter LMC - TEC

1 x 290cm

98655-773

1 x 340cm

98655-774

1 x 370cm

98655-775

1 x 400cm

98655-776

1 x 450cm

98655Z126

1 x 500cm

98655Z127


1 x 550cm

98655Z128

1 x 600cm

98655Z129

**ADAPTER RAPIDO DISTINCTION**

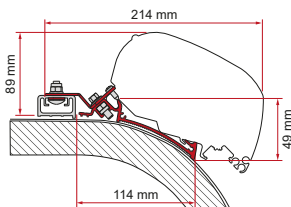

Quantity / Length

Item No.

Adapter Rapido Distinction

1 x 400cm

98655Z080

1 x 450cm

98655Z081

1 x 490cm

98655Z082


1 x 600cm

98655Z125

**ADAPTER RAPIDO C LINE**



Rapido C86, C56, C55, C50

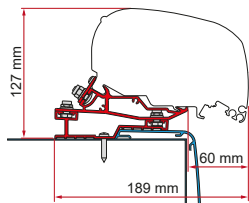

Quantity / Length

Item No.

Adapter Rapido C Line

340cm - C56

98655Z120

400cm - C50

98655Z121


425cm - C55

98655Z122

450cm - C86

98655Z123

**ADAPTER CARTHAGO MALIBU**

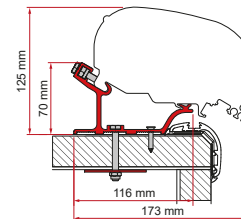

Quantity / Length

Item No.

Adapter Carthago Malibu

1 x 340cm

98655Z083

1 x 400cm

98655Z084

1 x 450cm


98655Z085

1 x 490cm

98655Z086

● black finish brackets      \* for right hand drive      \*\* for left and right hand drive

**KIT AUTOCRUISE**

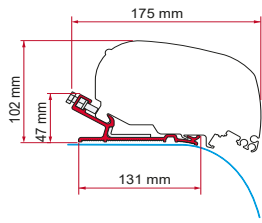


Quantity / Length

Item No.

Kit Autocruise	3 x 15cm	98655-420
----------------	----------	-----------

**ADAPTER HYMER**

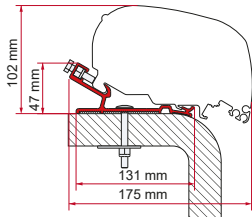


Quantity / Length

Item No.

Adapter Hymer	1 x 290cm	98655-932
	1 x 320cm	98655-933
	1 x 340cm	98655-934
	1 x 370cm	98655-935
	1 x 400cm	98655-936
	1 x 450cm	98655-937
	1 x 490cm	98655-938
	1 x 550cm	98655Z132
1 x 600cm	98655Z133	

**KIT CARAVAN STANDARD**

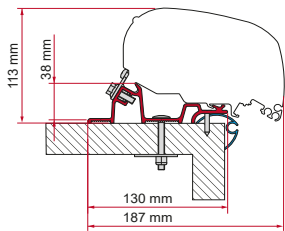


Quantity / Length

Item No.

Kit Caravan Standard	2 x 50cm - 2 x 30cm	98655-657
----------------------	---------------------	-----------

**KIT LMC ADAPTER CARAVAN ROOF**

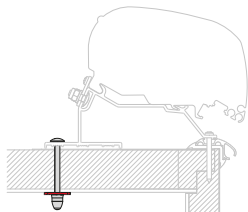

Kit consisting of 4 plates, screws & nuts enabling the installation of the F80s awning to LMC caravans using the Kit or Adapter Caravan Roof

Quantity


Item No.

Kit LMC Adapter Caravan Roof	4 plates, screws & nuts	98655Z100
------------------------------	-------------------------	-----------

**KIT / ADAPTER CARAVAN ROOF**



Dethleffs  
Fendt  
LMC  
Trigano

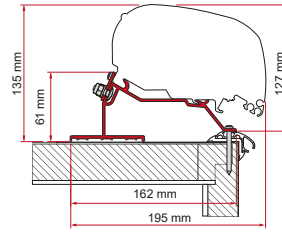


Quantity / Length

Kit and adapters equipped with aluminum finishing kit as standard

Adapter Caravan Roof

Kit Caravan Roof

**KIT BAILEY**

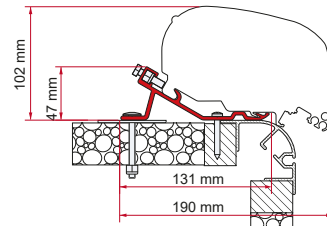

Quantity / Length

Item No.


Kit Bailey	3 x 25cm	98655-939
------------	----------	-----------

**ADAPTER / KIT ADRIA CARAVAN**



≥ 2015

new  
20  
23

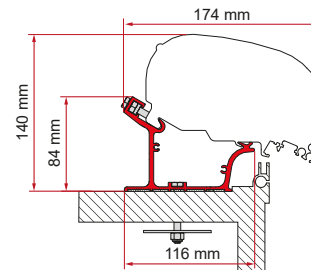

Quantity / Length

Item No.

Kit Adria Caravan	2 x 50cm + 2 x 27cm	98655Z140
Adapter Adria Caravan 450 *	450cm	98655Z141
Adapter Adria Caravan 500 *	500cm	98655Z142
Adapter Adria Caravan 550 *	550cm	98655Z143
Adapter Adria Caravan 600 *	600cm	98655Z144


\* without drilling

● black finish brackets

\* for right hand drive

\*\* for left and right hand drive

**KIT HOBBY EXCELLENT**

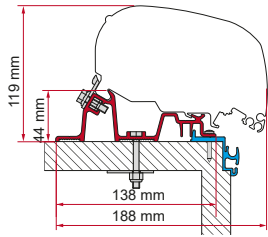

Quantity / Length


Item No.

Kit Hobby Excellent

2 x 50cm -  
2 x 30cm

98655-662

**KIT HOBBY EASY / ONTOUR / ADRIA ADORA**

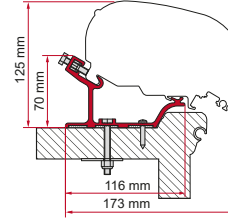

Quantity / Length

Item No.

Kit Hobby Easy / Ontour /  
Adria Adora


2 x 50cm - 2 x 30cm

98655-949

**KIT HOBBY PREMIUM & ONTOUR**



≥ 2012

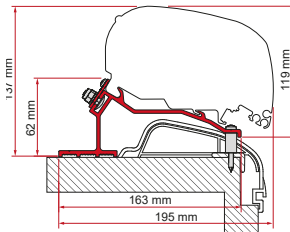

Quantity / Length


Item No.

Kit Hobby  
Premium & Ontour

2 x 25cm -  
2 x 50cm

98655Z089

**KIT HOBBY PREMIUM**

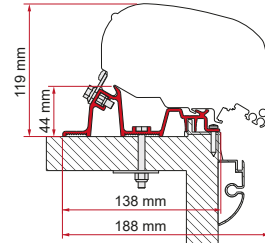

Quantity / Length

Item No.

Kit Hobby Premium


2 x 50cm - 2 x 30cm

98655-628

**KIT CARAVAN HOBBY**



≥ 2009

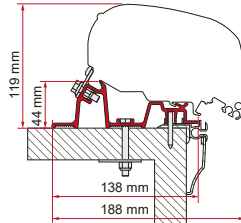

Quantity / Length

Item No.

Kit Caravan Hobby


2 x 50cm - 2 x 30cm

98655-921

**ADAPTER FORD TRANSIT L3 H3**



H3 - L3

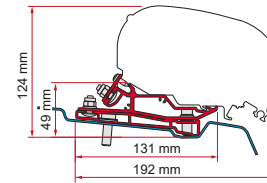

Check the position of the antenna on the vehicle before purchase and installation



new  
2023

Quantity / Length

Item No.

Adapter Ford Transit L3 H3


1 x 320cm

98655Z145

**KIT HOBBY CARAVAN**



≥ 2014

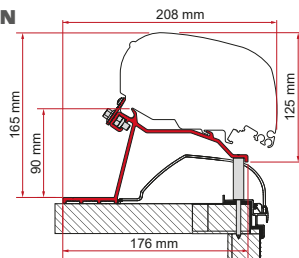

Quantity / Length

Item No.

Kit Hobby Caravan

2 x 27cm - 2 x 60cm


98655Z065

**ADAPTER FORD TRANSIT H3**



≥ 2014  
H3 - L4

MK8

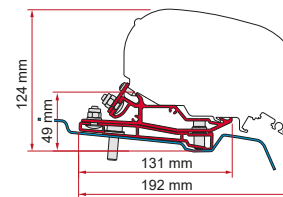

Check the position of the antenna on the vehicle before purchase and installation

Quantity / Length

Item No.

Adapter Ford Transit H3


1 x 400cm

98655Z108

**KIT FIXING BAR**



Only for use with  
Fixing Bar Pro L  
(98655-295)

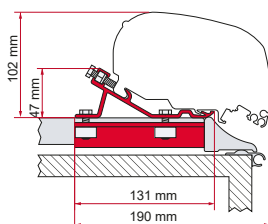

Quantity / Length

Item No.

Kit Fixing Bar


3 x 20cm

98655-384

**\*\* KIT DUCATO H2 SKYROOF**



new  
2023

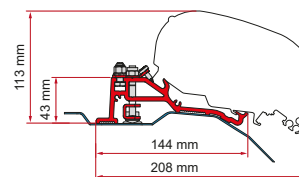

bracket required if the vehicle is equipped with a panoramic rooflight

Quantity / Length

Item No.

Kit Ducato H2 Skyroof

3 x 35cm

98655Z139


- black finish brackets
- \* for right hand drive
- \*\* for left and right hand drive

**\*\* KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER**



≥ 2006  
H2 - L2 / L3  
Low profile  
Only for F80s

new  
2023

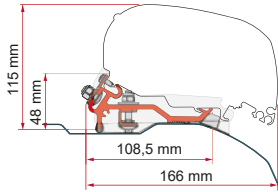

Brackets complete with Rain Guard Slim Kit 450cm and Cover Kit

Not suitable for vehicles with front panoramic rooflight

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer Low Profile

1 x 20cm -  
1 x 15cm -  
1 x 12cm


98655Z149  
● 98655Z150

**\*\* KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006  
H2 - L4  
Low profile  
Only for F80s

new  
2023

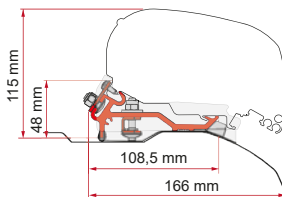

Brackets complete with Rain Guard Slim Kit 450cm and Cover Kit

Not suitable for vehicles with front panoramic rooflight

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer Low Profile


2 x 26cm -  
1 x 12cm

98655Z148

**\*\* KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006  
H2 - L2 / L3  
For F80s and F65s

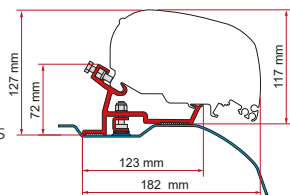

Before installation, check compatibility with the front panoramic rooflight

Brackets equipped with Kit Rain Guard 300cm

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer


1 x 20cm -  
1 x 15cm -  
1 x 12cm

98655Z101  
● 98655Z102

**\*\* KIT SMART CLAMP DUCATO**



≥ 2006  
H2 - L2 / L3 / L4  
F80s

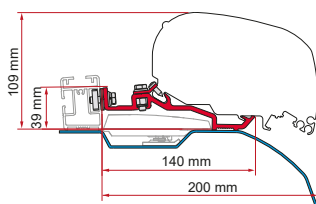

Quantity / Length

Item No.

Kit Smart Clamp Ducato


2 x 20cm -  
2 x 12cm

98655Z097

**\*\* KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H2**



≥ 2006  
H2 - L4  
For F80s and F65s

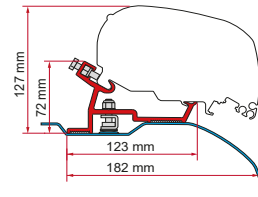

Before installation, check compatibility with the front panoramic rooflight

Brackets equipped with Kit Rain Guard 400cm

Quantity / Length

Item No.

Kit Fiat Ducato / Jumper / Boxer - H2


2 x 26cm -  
1 x 12cm

98655-904

**KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER - H3**



≥ 2006  
H3 - L3 / L4

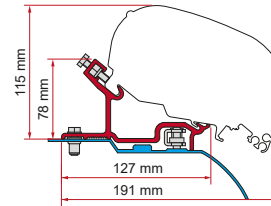

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H3


1 x 20cm -  
1 x 25cm -  
1 x 35cm

98655-656

**KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER H2 - ≤ 06**



≥ 1994 ≤ 2006  
H2 - L2 / L3  
High profile bracket

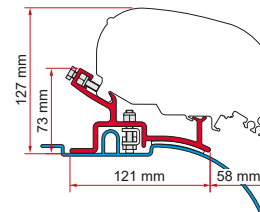

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - ≤ 2006


2 x 20cm

98655-373

**KIT FIAT DUCATO / CITROËN JUMPER / PEUGEOT BOXER H2 - ≤ 06**



≥ 1994 ≤ 2006  
H2 - L2 / L3  
Low profile bracket

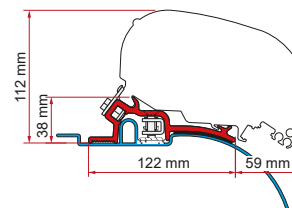

Quantity / Length

Item No.

Kit Fiat Ducato / Citroën Jumper / Peugeot Boxer - H2 - ≤ 2006

2 x 20cm

98655-693

● black finish brackets

\* for right hand drive


\*\* for left and right hand drive

**ADAPTER SPRINTER F65EAGLE**



Sprinter ≥ 2006

VW Crafter  
≥ 2006 ≤ 2016

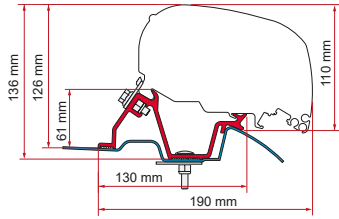

Quantity / Length


Item No.

Adapter Sprinter F65eagle	1 x 400cm	98655-768 * 98655Z010
---------------------------	-----------	--------------------------

**KIT IVECO DAILY H2**



≥ 2006 ≤ 2014  
H2 - L2/L3

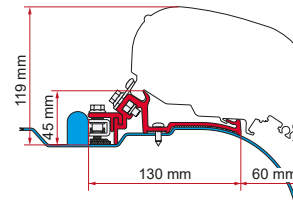

Quantity / Length

Item No.


Kit Iveco Daily H2	2 x 15cm - 1 x 20cm	98655-733
--------------------	------------------------	-----------

**KIT RENAULT MASTER H2**



≥ 1997 ≤ 2009  
H2 - L2 / L3

Also for  
Opel Movano  
≥ 1998 ≤ 2010  
Nissan Interstar  
≥ 1998 ≤ 2011

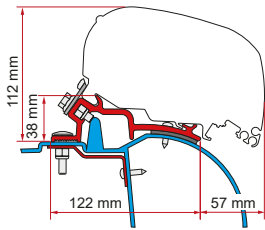

Quantity / Length

Item No.


Kit Renault Master H2	2 x 29cm - 1 x 12cm	98655-468
-----------------------	------------------------	-----------

**\*\* KIT RENAULT MASTER H2 ≥ 2010**



≥ 2010  
H2 - L2 / L3

Also for  
Opel Movano  
and Nissan  
NV400

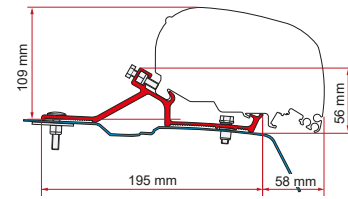

Quantity / Length

Item No.


Kit Renault Master ≥ 2010	1 x 12cm - 1 x 44cm - 1 x 64cm	98655-881
---------------------------	--------------------------------------	-----------

**KIT MERCEDES SPRINTER - ROOF RAIL**



with Roof Rail

≥ 2006 ≤ 2016  
H2 - L1/L2/L3  
Mercedes Sprinter/  
VW Crafter/  
Freightliner  
Sprinter/Dodge Sprinter

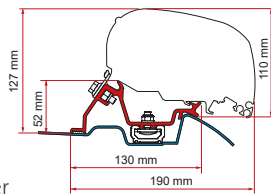

≥ 2016  
H2 - L1/L2/L3/L4  
Mercedes  
Sprinter/  
Freightliner  
Sprinter/Dodge  
Sprinter

Quantity / Length

Item No.

Kit Mercedes Sprinter with Roof Rail	2 x 40cm - 1 x 12cm	98655-772
---	------------------------	-----------




**• KIT VW CRAFTER H3**



≥ 2017

Man Tge

Without Roof Rail

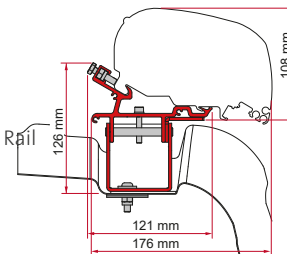

Quantity / Length

Item No.

Kit VW Crafter H3	1 x 20cm - 1 x 32cm	98655Z043 * 98655Z058
-------------------	------------------------	--------------------------


For VW Crafter  
L3/H3 pls  
choose the  
F80s 320cm  
long

For VW Crafter  
L4/H3 pls  
choose the  
F80s 400cm  
long

**KIT MERCEDES SPRINTER / VW CRAFTER HIGH ROOF**



≥ 2006 ≤ 2016  
H2 - L1/L2/L3/L4  
Mercedes Sprinter/  
VW Crafter/  
Dodge Sprinter/  
Freightliner Sprinter

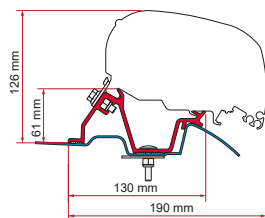

≥ 2016  
H2 - L1/L2/L3/L4  
Mercedes  
Sprinter/ Dodge  
Sprinter/  
Freightliner  
Sprinter

Quantity / Length

Item No.

Kit Mercedes Sprinter / VW Crafter High Roof	1 x 12cm - 1 x 53cm - 1 x 60cm	98655-746 * 98655-889
---	--------------------------------------	--------------------------




**KIT VW CRAFTER - ROOF RAIL**



≥ 2017  
H3 - L3/L4

Man Tge

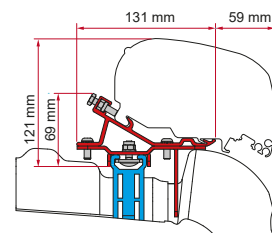

Quantity / Length

Item No.

Kit VW Crafter with Roof Rail	1 x 20cm - 1 x 30cm - 1 x 40cm	98655Z036
----------------------------------	--------------------------------------	-----------

with Roof Rail

• black finish brackets      \* for right hand drive      \*\* for left and right hand drive




# F40van

## • ADAPTER PSA



H1  
L = 4956/9 mm

Opel Vivaro C  
Opel Zafira Life  
Vauxhall Vivaro Life  
≥ 2019

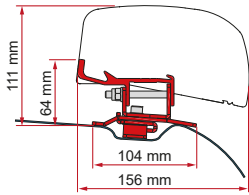

Citroën Jumpy III gen. / Spacetourer  
Peugeot Traveller  
Peugeot Expert III gen.  
Toyota ProAce II / Toyota ProAce Verso  
≥ 2016

Quantity / Length      Item No.

Adapter PSA      1 x 260cm      98655Z110


## • KIT VW T5 / T6



≥ 2003  
H1 - L1/L2

new  
2023

VW T5 / T6  
Transporter / Caravelle / Multivan

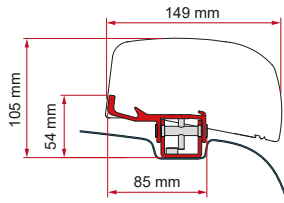


Quantity / Length      Item No.

Kit VW T5 / T6      1 x 20 cm  
1 x 25 cm      98655Z152  
\* 98655Z153

## • KIT RENAULT TRAFIC L1



≥ 2014  
H1 - L1

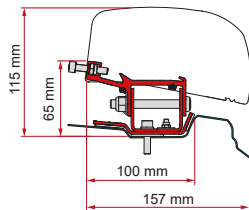

Nissan NV 300 / Fiat Talento  
≥ 2014

Opel Vivaro-Vauxhall Vivaro B  
≥ 2014 ≤ 2018


Quantity / Length      Item No.

Kit Renault Trafic L1      2 x 26cm      \*\* 98655Z087

## • KIT RENAULT TRAFIC L2



≥ 2014  
H1 - L2

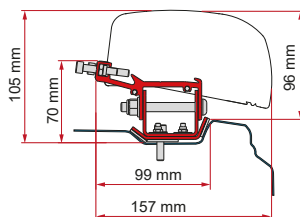

Nissan NV 300 / Fiat Talento  
≥ 2014

Opel Vivaro-Vauxhall Vivaro B  
≥ 2014 ≤ 2018


Quantity / Length      Item No.

Kit Renault Trafic L2      2 x 26 cm      \*\* 98655Z088

## • KIT MERCEDES V CLASS



≥ 2014  
H1 - L2

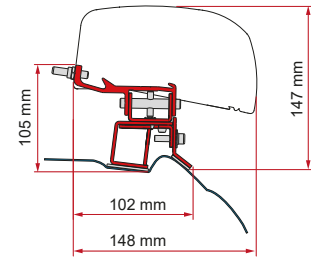

Quantity / Length


Item No.

Kit Mercedes V Class      1 x 39cm - 1 x 22cm      98655Z078

## • KIT FORD CUSTOM L1



≥ 2012  
H1 - L1

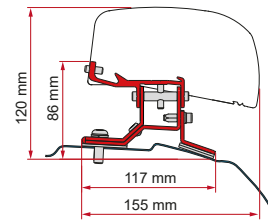

Quantity / Length


Item No.

Kit Ford Custom L1      1 x 45,5cm - 1 x 20cm      98655Z044  
\* 98655Z046

## • KIT FORD CUSTOM L2



≥ 2012  
H1 - L2

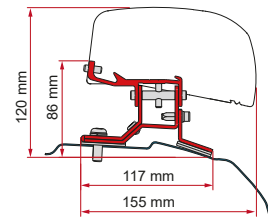

Quantity / Length


Item No.

Kit Ford Custom L2      1 x 22,5cm - 1 x 20cm      \*\* 98655Z045

## • KIT NISSAN NV350



≥ 2012  
H1 - L2

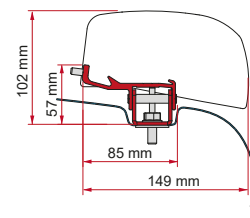

Nissan Impendulo / Isuzu Como / Mitsubishi Fuso Canter Van  
≥ 2012

Quantity / Length

Item No.

Kit Nissan NV350      1 x 20cm - 1 x 25cm      \* 98655Z041

● black finish brackets

\* for right hand drive

\*\* for left and right hand drive


# F35pro

## • KIT CAMPÉRÈVE CAP ROAD



new  
2023

≥ 2016  
H1  
L= 4959 mm

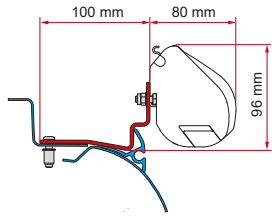

Only on Rapido Autocaravan Campérève Cap Road based on Peugeot Expert III gen.


Quantity / Length      Item No.

Kit Campérève Cap Road      2 x 12cm      \*\* 98655Z151

## • KIT COMBI RAIL BRACKET



new  
2023

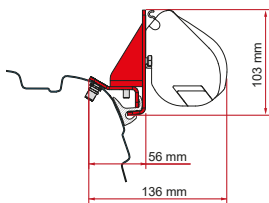

Also for models with lift roof


Quantity / Length      Item No.

Kit Combi Rail Bracket (Rail Brandrup - Vamoose)      2 x 8cm      \*\* 98655Z154

## • KIT VW T5 / T6 MULTIRAIL REIMO



new  
2023

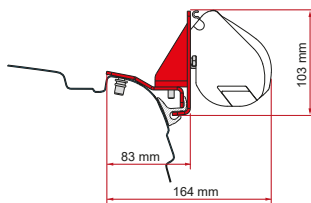

Also for models with lift roof


Quantity / Length      Item No.

Kit VW T5 / T6 Multirail Reimo      2 x 8cm      \*\* 98655Z155

## • KIT VW CADDY MAXI LIFT ROOF



≥ 2016  
H1 - L1

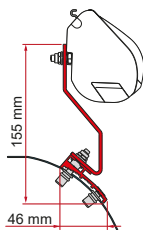


Quantity / Length      Item No.

Kit VW Caddy Maxi Lift Roof      2 x 12cm      \*\* 98655Z109

## • KIT VW CADDY MAXI



≥ 2016  
H1 - L1

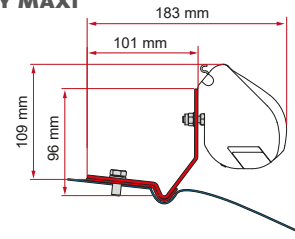


Quantity / Length      Item No.

Kit VW Caddy Maxi      2 x 8cm      \*\* 98655Z096

## • KIT VW T6 KEPLER



≥ 2014  
H1 - L2

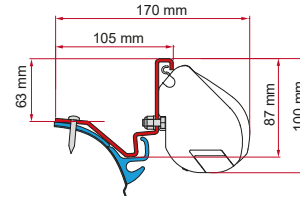


Quantity / Length      Item No.

Kit VW T6 Kepler      2 x 10cm      98655Z033

## KIT VW T5 / T6 MULTIVAN TRANSPORTER



≥ 2003  
H1 - L1

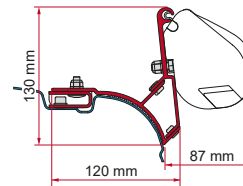

Without "C" roof rail

VW T5 / T6 Transporter / Caravelle / Multivan




Quantity / Length      Item No.

Kit VW T5 / T6 Multivan Transporter      2 x 21,5cm      \* 98655Z005

## KIT VW T5 / T6 MULTIVAN TRANSPORTER



≥ 2003  
H1 - L1/L2

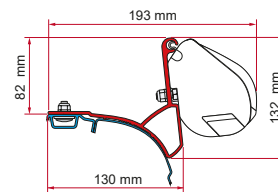

Installation on rail. For the Transporter version the rail is optional: contact the VW dealer to obtain the rail.




Quantity / Length      Item No.

Kit VW T5 / T6 Multivan/Transporter      2 x 12cm      98655-747

## KIT VW T5 / T6 CALIFORNIA



≥ 2003  
H1 - L1

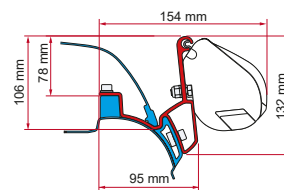

Quantity / Length      Item No.


Kit VW T5 / T6 California      2 x 12cm      98655-748

- black finish brackets
- \* for right hand drive
- \*\* for left and right hand drive

● **KIT VW T3 / T3 LIFT ROOF**



≥ 1979 ≤ 1990  
H1

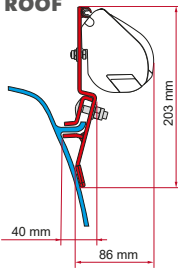

Also for models with lift roof


Quantity / Length      Item No.

Kit VW T3/T3 Lift Roof	2 x 8cm	98655Z115
------------------------	---------	-----------

● **KIT MERCEDES VIANO / MARCO POLO / VITO / V CLASS**



H1 - L2  
Viano Vito II: ≥ 2003 ≤ 2013  
Viano Vito II Marco Polo:  
≥ 2003 ≤ 2013  
only with manual roof  
V Class Vito III - Long: ≥ 2014

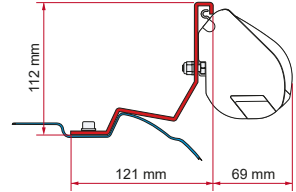

Quantity / Length      Item No.


Kit Mercedes Viano Marco Polo / Vito / V Class	2 x 13cm	98655-887
--	----------	-----------

● **KIT BRANDRUP VW T4**



≥ 1990 ≤ 2003  
H1 - L1/L2

Reimo Multirail

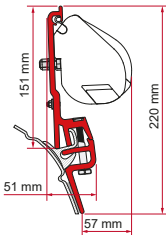

Quantity / Length      Item No.


Kit Brandrup VW T4	2 x 8cm	98655Z011
--------------------	---------	-----------

● **KIT MERCEDES VITO / VITO MARCO POLO**



≥ 1996 ≤ 2003  
H1 - L1

Marco Polo:  
only with manual roof

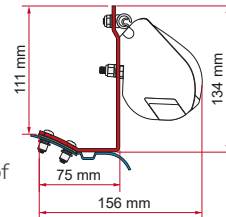

Quantity / Length      Item No.


Kit Mercedes Vito / Vito Marco Polo	2 x 8cm	98655-682
-------------------------------------	---------	-----------

● **KIT VW T4 / VW T4 LIFT ROOF**



≥ 1990 ≤ 2003  
H1 - L1/L2

Also for models with lift roof

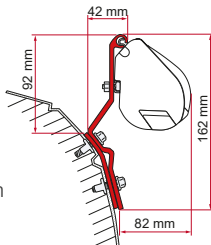


Quantity / Length      Item No.

Kit VW T4 Lift Roof	2 x 8cm	98655-111
---------------------	---------	-----------

● **KIT MERCEDES VITO JULES VERNE**



≥ 2014  
H1 - L2

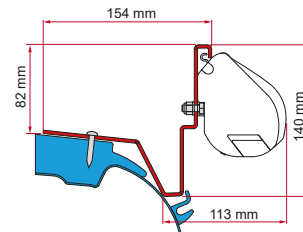

Quantity / Length      Item No.


Kit Mercedes Vito Jules Verne	2 x 12cm	98655Z034
-------------------------------	----------	-----------

● **KIT CLASS V MARCO POLO**



≥ 2014  
H1 - L2

Not suitable for Marco Polo with electric roof

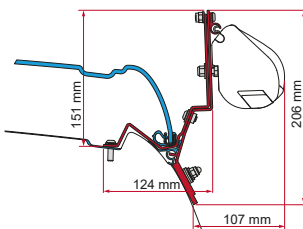


Quantity / Length      Item No.

Kit Class V Marco Polo	1 x 12cm - 1 x 13cm	98655Z022
------------------------	------------------------	-----------

● **KIT RENAULT TRAFIC / OPEL VIVARO / FIAT TALENTO / NISSAN PRIMASTAR**



≥ 2001 ≤ 2014  
H1 - L1/L2

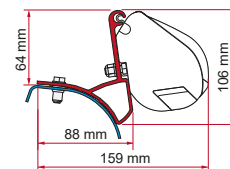

Quantity / Length      Item No.

Kit Renault Trafic / Opel Vivaro / Fiat Talento / Nissan Primastar	2 x 12cm	98655-893
--	----------	-----------

● black finish brackets

\* for right hand drive


\*\* for left and right hand drive

**KIT RENAULT TRAFIC / OPEL VIVARO / FIAT TALENTO / NV300 / RAPIDO MIRANDE S**



≥ 2014 ≤ 2018  
H1 - L1/L2  
Opel/ Vauxhall Vivaro B

≥ 2014  
H1 - L1/L2  
Renault Trafic/ Nissan  
Nv300/ Fiat Talento

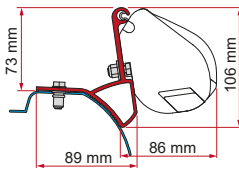

≥ 2015  
H1 - L1  
Renault Trafic  
Dreamer  
Mirande S/  
Campereve  
Mirande S

Quantity / Length      Item No.

Kit Renault Trafic / Opel Vivaro / Fiat Talento / NV300 / Rapido Mirande S	2 x 12cm	98655Z020
--	----------	-----------

**• KIT NISSAN NV200**



H1 - L1


Nissan NV 200 ≥ 2009  
Nissan Evalia ≥ 2010  
Mitsubishi Delica V ≥ 2007

WITHOUT



Quantity / Length      Item No.

Kit Nissan NV200	3 x 8cm	98655Z026
------------------	---------	-----------

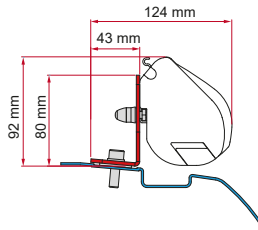


**• KIT FORD CUSTOM**



≥ 2012  
H1 - L1

Only for use with the awning F35pro 2.70m

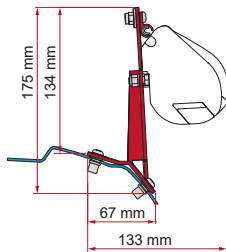

Attention: opening/closing operations of the awning must be performed with the sliding door closed

Quantity / Length      Item No.


Kit Ford Custom	2 x 12cm	98655Z112
	2 x 12cm	* 98655Z136

**• KIT PSA**



H1  
L = 4956/9 mm

Opel Vivaro C  
Opel Zafira Life  
Vauxhall Vivaro Life  
≥ 2019

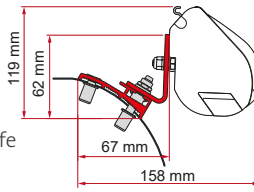

Citroën Jumpy III gen. / Spacotourer  
Peugeot Traveller  
Peugeot Expert III gen.  
Toyota ProAce II / Toyota ProAce Verso  
≥ 2016

Also for models with lift roof


Quantity / Length      Item No.

Kit PSA	2 x 20cm	** 98655Z095
---------	----------	--------------

**• KIT FORD CUSTOM CAPLAND / CAPFUN**



≥ 2015 ≤ 2018  
H1 - L2

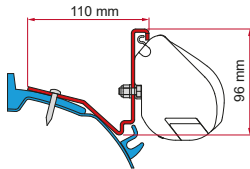


Quantity / Length      Item No.

Kit Ford Custom Cap Land / Cap Fun	2 x 12cm	98655Z035
------------------------------------	----------	-----------

**• KIT STANDARD**



Installation on Roof Rails

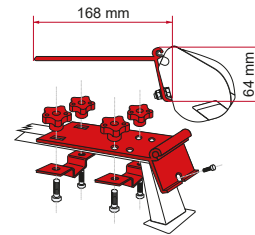

Quantity / Length      Item No.


Kit Standard	2 x 8cm	98655-142
--------------	---------	-----------

**• KIT FORD CUSTOM CAP COAST / CAPLAND / CAPLIFE**



H1 - L1  
Cap Coast ≥ 2018


H1 - L2  
Cap Land / Cap Life  
≥ 2019

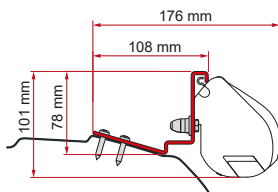

Quantity / Length      Item No.

Kit Ford Custom Cap Coast / Cap Land / Cap Life	2 x 12cm	98655Z027
---	----------	-----------

**RAIL**

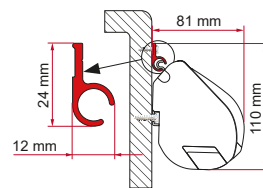


Quantity / Length      Item No.

Rail	1 x 300cm	02361-01A
	1 x 400cm	02361-01C

● black finish brackets      \* for right hand drive      \*\* for left and right hand drive

**KIT ERIBA TOURING**

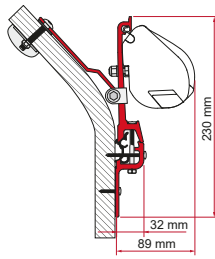

Quantity / Length

Item No.

Kit Eriba Touring


2 x 8cm

98655Z009

**KIT AUTO**



Installation on  
Roof Rails

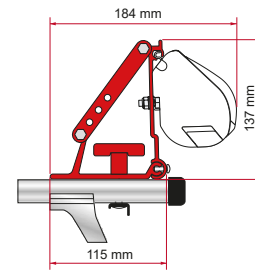

Quantity / Length

Item No.

Kit Auto

2 x 8cm

98655-310

# Compass


**KIT VW T5 / T6 TRANSPORTER / MULTIVAN COMPASS**



WITHOUT



DRILLING

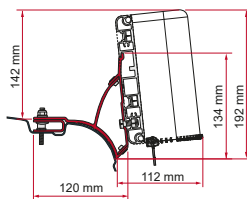

Quantity / Length


Item No.

Kit VW T5/T6 Transporter /  
Multivan Compass

1 x 20cm - 1 x 25cm

98655Z018

**KIT RENAULT TRAFIC**

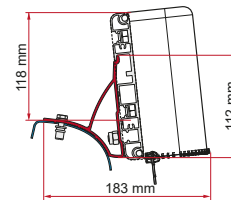

Quantity / Length

Item No.

Kit Renault Trafic  
≥ 2001 ≤ 2015

2 x 16cm

98655Z031


Kit Renault Trafic  
≥ 2015

98655Z032

**KIT ROOF RAIL**



Rail max width  
5,5cm  
Min. 2 Kits  
to install an  
awning

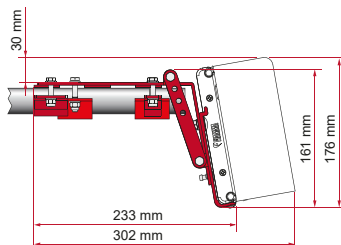

Quantity / Length


Item No.

Kit Roof Rail

1 x 12cm

98655-770

**KIT AUTO**

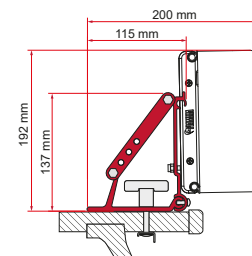

Quantity / Length

Item No.

Kit Auto

2 x 8cm

98655-310

# CaravanStore

**KIT HOBBY CARAVANSTORE**



Supplementary  
kit to fix the  
CaravanStore on  
Hobby caravans,  
2009 production,  
edition 6.



Item No.

Kit Hobby CaravanStore

98655-034

● black finish brackets

\* for right hand drive

\*\* for left and right hand drive

